

Candy Melts Candy Melting Pot

Instructions

Wash removable silicone pot before and after each use. Be sure silicone pot is completely dry before adding candy. To preheat, place silicone pot in heating base; turn switch to Melt for 5 minutes. Use Wilton Candy Melts candy or chop melting chocolate into small pieces. Use smaller amounts for faster melting. Stir candy occasionally until completely melted. Add more candy if desired, up to MAX FILL line. When completely melted, move switch to Warm to keep candy fluid. If candy begins to cool and thicken, switch back to Melt. When finished, switch to Off and let pot cool before cleaning.