

Product Specifications

Assembled Depth (in.)	61.5
Assembled Height (in.)	29
Assembled Width (in.)	16.5
Cutting Options	Bag & discharge chute
Cutting Width (in.)	14
Deck Cleanout	No
Foldable Handle	Yes
Lawn Mower Type	Walk-behind
Maximum Cutting Height (in.)	2.52
Maximum Extension Cord Length (ft.)	100
Minimum Cutting Height (in.)	1.18
Minimum Rated Extension Cord	14 gauge
Mulching Capability	No

Product Weight (lbs)	29
Rear Wheel Size (in.)	5.5
Size of Yard	1/4 acre or less
Sound Power Level	92 dB
Start Type	Electric
Terrain	Flat, sloped
Tool-free Adjustments	Yes
No Load Speed (rpm)	3500
Assembled Weight (lb.)	29
Bagger	Yes
Bagger Capacity (gal.)	10.6
Blade Length (in.)	14
Drive System	Walk-behind
Grass Bag	10.6 gal
Height Adjustment	3-position
Length of Cord (ft.)	1
Mower Amperage (amps)	12

Your Mow Joe MJ401E has a decibel rating of 92 decibel

You can use the following chart as a means of comparison:

How do I adjust the cutting height on my Sun Joe Mow Joe MJ401E Lawn Mower?

1. Power down and unplug the lawnmower.
2. Remove and empty the grass bag.
3. Place the lawnmower upside down so that you have a full view of the four wheels.
4. The wheel axles can be placed into 3 different cutting heights: Low (will cut grass the shortest), medium and high.
5. Move all four wheels to the desired cutting height by pulling back on the rod axle and set your desired wheel height. Make sure all four wheels are at the same height.
6. Place the lawnmower back on its wheels and re-attach the grass bag.
7. Plug back in your mower and resume normal use

I've pressed the switch button, then squeezed the handle, but my Mow Joe MJ401E does not power on. What should I do?

As an added safety feature, the machine will only power on while pressing the switch button and squeezing the trigger simultaneously. Use your finger on one hand to press the switch button and use your other hand to squeeze the trigger. Once your machine starts, you may then release your finger on the switch button, and grip the trigger to maintain operation. If you wish to power off, release your grip on the trigger.

If you find that your MJ401E unit does not start, find the unit's rectangular reset button located near the safety start button. After doing this, start your lawn mower as usual.

