

INSTRUCTIONS FOR USE

Cleaning & Maintenance -To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the comb guide - the comb guides can be rinsed under running water. Please make sure they are dried thoroughly before storage or further use.
- Using the cleaning brush, brush and blow away any remaining hair from the blades.
- Do not disassemble the blades
- Always inspect the appliance before use to ensure the clipper blades are free from hair, debris etc.
- For best performance, use on clean, dry hair that has been combed until tangle-free.
- Ensure the appliance is sufficiently charged or plugged into the mains. NOTE: The appliance should not be used for longer than 20 minutes when operated from the mains.

IMPORTANT! It is highly recommended before each use to oil the blades with the oil provided. This ensures optimum cutting performance. For the first use you will need to use the oil supplied with the product, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil. To oil the blades, ensure the unit is switched on. Gently squeeze the oil tube and apply 2 drops of oil onto the blades. Leave the unit on for a further few seconds to allow the oil to thoroughly spread the length of the blades. Switch off the unit and remove any excess oil by gently dabbing with a cloth.