

Brass Impact Sprinkler 1/2" Series

Operational Information

Adjusting the Distance of Spray

The distance of spray can be adjusted with the following methods:

- 1. Diffuser Pin Assembly Screw deffuser pin into stream to reduce coverage.
- 2. Deflector Shield Assembly Push deflector shield into stream to reduce coverage.

Anti-Backsplash Arm

 
The Anti-Back Splash Arm is designed to prevent water from spraying outside of the desired pattern area.

Adjusting the Pattern of Spray

The spray pattern can be adjusted with the following methods:

Partial Circle Coverage

Push the trip pin to the down position. Slide the friction collars to adjust any portion of a 360 degree circle.



Move the Trip Pin to the up position.

