

Restarting or resetting the WeMo Light Switch manually

Resetting or restarting your WeMo Light Switch is easy with its dedicated **Reset** and **Restart** buttons. A reset or a restart is sometimes performed on the following conditions:

- If the WeMo Light Switch is not detected by the WeMo App.
- If the WeMo Light Switch is blinking blue after firmware update.
- If the WeMo Light Switch is not detected by the WeMo App after firmware update.

QUICK TIP: On the WeMo Light Switch Faceplate, the Reset button is also known as the **Wi-Fi Reset** button and the Restart button as the **Power Restart** button.

IMPORTANT: This process will delete all previous settings done in the WeMo App. You need to set up the WeMo Light Switch with the WeMo App again.

Step 1:

Press and **hold** the **Restart** and the **Reset** buttons together for **five (5) clock** seconds, then release.

The WeMo Light Switch Wi-Fi icon will blink to green then amber in color, indicating a successful reset.

Step 2:

Set up and sync your WeMo Light Switch with the WeMo App. For instructions, click [here](#).

NOTE: To get access and interact with other Belkin users in the WeMo Community, click [here](#).