

BAIN MARIE

INSTRUCTIONS FOR THE WET HEAT SOUP WARMER

Specification:	Capacity:	24L
	Voltage:	220V~240V AC 50Hz
		110V AC 60Hz
		1200W

Operating and Maintenance:


- * **Plug unit into correct electrical socket.**
- * **Use with WET HEAT ONLY. Add water in the stainless steel container. Never overfill with water. Remove any excess water immediately.**
- * **The temperature control should be set between 1-2 and always operate the appliance at the lowest setting to maintain correct serving temperature. Hold at high temperature when setting between 3-5.**
- * **A neon light will glow when the unit is turned on. Turn the dial to 0 to switch off. Unplug from the wall socket to isolate the appliance from the electrical supply.**
- * **Never move or carry the appliance when unit is switched on, or containing hot soup or food.**
- * **Spilled soup or food should be removed immediately from all exterior surfaces. The stainless steel units should be wiped over with a damp soapy cloth.**
- * **Ensure unit is unplugged when not in use, when filling and when being cleaned.**
- * **The appliance must not be cleaned with a high pressure jet.**

IMPORTANT-----NEVER IMMERSE THE APPLIANCE IN WATER AS DAMAGE TO THE UNIT WILL RESULT AND THE GUARANTEE WILL BE VOIDED.

WARNING THIS APPLIANCE MUST BE EARTHED.

DO NOT OPERATE THE APPLIANCE EMPTY.

CHILDREN, THE DISABLED AND DEMENTED PERSON, AND THESE WHO ARE IN LACK OF OPERATION EXPERIENCE ARE PROHIBITED TO USE THE APPLIANCE. PLEASE TAKE GOOD CARE OF CHILDREN TO MAKE SURE THEY ARE NOT TO PLAY WITH THE APPLIANCE.

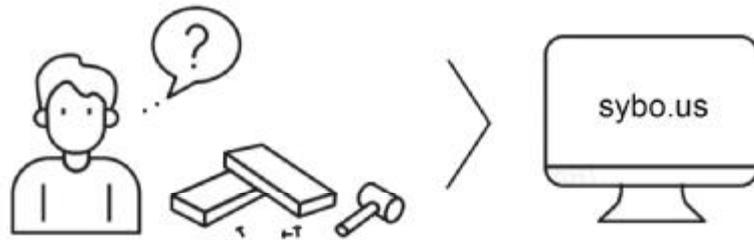

**Question? Comments?
Reach out to us to get expert support!**

✉ cs@sybo.us
🌐 sybo.us
☎ 650.735.1862

Follow SYBO on



**Claim 1-year warranty
at sybo.us/warranty**

