

Troubleshooting Steps

No pictures or sound:

Is the signal reaching your TV? Check:

- Everything including the booster is plugged in and switched on
- Coaxial connections are correctly made (no braid or foil is touching the inner core)

Picture or sound breaking up:

- Use the best wideband aerial ideally fitted outdoors
- Use good quality coax cable, poorly screened cable can pick up noise
- In some cases, too much signal can cause signal break-up which can be solved by fitting an attenuator to the input to the booster.