



-Requires firmware V45 or higher- To do so, simultaneously press (and release):

- "D-Pad Right" + "MODE button" to **increase** the angle of rotation by one step

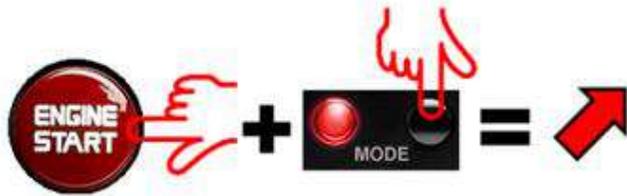

- "D-Pad Left" + "MODE button" to **decrease** the angle of rotation by one step

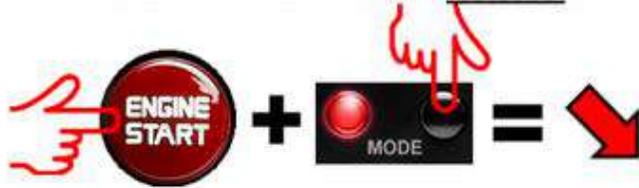

- Changing the angle of rotation manually does not permanently save the change

4 possible settings	
ANGLE OF ROTATION selected	LED status
270°	Flashes 1 time
360°	Flashes 2 times
540°	Flashes 3 times
900°	Flashes 4 times
270°	Flashes 1 time
Etc.	Etc.

