

Table of contents of this manual

- Compatibility
- Notes on ink tanks
- How to replace the ink tanks
- Tips & Tricks

Compatibility

Compatible ink tanks for Canon printers - replace Canon PGI-520/CLI-521, PGI-525/CLI-526, PGI-550/CLI-551, PGI-570/CLI-571, PGI-580/CLI-581, PGI-5/CLI-8, PGI-9, PGI-35/CLI-36, CLI-42, PGI-72 PGI-555


Notes on ink tanks

- If an ink tank is removed, it should be replaced immediately with a new one.
- One ink tank should always be used in all colours.
- Only one ink tank should be replaced at a time. If more than one ink tank is empty, the replacement must be done in several passes.
- Only new ink tanks should be used. If a used ink tank is used, the nozzles may become clogged and the printer will not be able to determine the correct time for the next ink tank replacement.
- Before printing for the first time with the new ink tanks, it is possible that one or more cleaning operations of the print head are necessary to ensure a clean print image. This can be started via the maintenance/service menu in the printer settings.

Instructions for replacing the ink tanks


For detailed instructions, please refer to the printer manufacturer's manual.

1. Switch on the printer and open the paper output tray.
2. Open the top cover.
The print head will automatically move to the replacement position.
3. Replace the ink tank with the fast flashing indicator.
To do this, press the small lever below the ink container concerned and then remove the ink container.

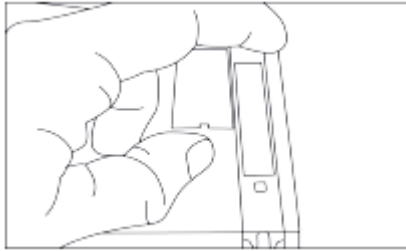


4. Preparing the new ink tank


Take the ink tank out of the packaging and remove the coloured tape (if you have it) COMPLETELY.

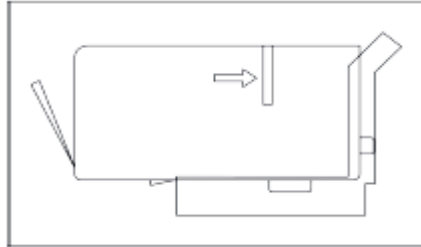

5. Now CAREFULLY remove the orange cap. Do not apply pressure to the sides of the ink container.

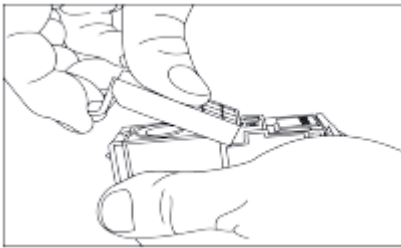

6. Insert the ink tank into the printer and press the ink tank down firmly until it clicks into place. If the ink tank is seated correctly, the indicator lights up steadily.

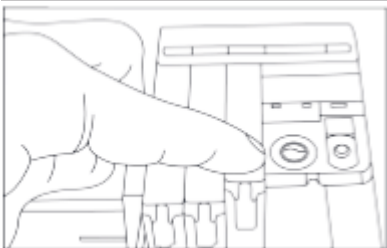

7. Close the top cover.

It is normal for your printer to notify you of the use of non-original ink tanks. You must acknowledge the message. If the printer does not print, remove the ink tanks again and reinsert them. If this does not help, disconnect the printer from the power supply for a few minutes and try again. If your printouts show white streaks, let the ink tanks rest in the printer for 15 minutes to allow the ink to settle inside the tanks. Then a print head cleaning should be performed. If the printer has not been used for a long time, printhead cleaning should be performed several times.

IMPORTANT: Never perform a software update on the printer as this may result in compatible ink tanks no longer being recognised.

The compatible ink tanks differ from the appearance of the original ink tanks. The design of these ink tanks has been specially developed to be compatible with many printer models. Please read the enclosed instructions carefully before installing the ink tanks.