

## Pignose 7100 Guide

### SPECIFICATIONS:

Power output:	.5 watts
Speaker:	5"
Batteries:	6 AA batteries (not included)
AC Operation:	Yes, with optional AC adapter (not included)
Dimensions:	6-1/4" x 5" x 9-1/2"
Weight:	6 lbs.

### **Important:**

The Battery holders in this amplifier are designed to hold the batteries firmly in place. So if you experience the amplifier not working on batteries, we suggest that you push on the batteries from the spring (-) side to the (+) side of the battery holder.

The Batteries are activated when the Volume/Power switch is turned on.

The Volume Knob is also the on/off switch. Simply turn on the amplifier and adjust the volume. When finished playing your amplifier, be sure to turn off the amplifier at the Volume switch and unplug your cable to avoid battery drain.

The Pignose 7-100 sound is so good that many players use it as a preamp in stage and studio performances. This is done by sending the pre amp out signal to a bigger amp or PA (for stage performances) or to the recording console (for recording).

This amplifier has a full range of tone, from moderately clean to super distorted. Just dial in the volume knob to the desired tone effect wanted. This amp was not designed for super clean tone by itself.

Pignose Customer Service # 1-800-9PIGNOSE