

Care & Maintenance

Machine-washable pad

WASHING INSTRUCTIONS: CAUTION: DO NOT DRY CLEAN! DO NOT BLEACH!
DO NOT USE WRINGER! 1. Disconnect pad from outlet. 2. Detach Pad
Connector from the Control Connector. 3. Machine wash in cool water on
gentle cycle, or hand wash. Use mild detergent. 4. Hang to dry or machine dry
on gentle, cool cycle. 5. Do not plug in pad and pad connector until they are
completely dry.