

Troubleshooting below

#### INSTRUCTIONS FOR USE

- On longer, thicker hair types, it is suggested to rough dry your hair before using the airstyler to remove excess moisture pre-styling. Once the hair is 80% dry, you can start styling the hair.
- Use a hairbrush to remove any tangles from the hair and create your parting ready for styling. On longer, thicker hair types, you may want to divide the hair into sections to make styling easier.
- Turn the airstyler on by sliding the switch to the heat setting suitable for your hair type.
- Take a section of hair and place the brush head under the section of hair, as close to the roots as possible.
- Use the brush head to lift the hair at the roots as you style.
- Move the airstyler down along the hair section. As you reach the ends of the hair, rotate the airstyler slightly away from your face to curl the ends under.
- Repeat as necessary.
- For a lasting style, select the cool setting '\*' on warm hair whilst holding the brush head at the roots.
- After use, switch off by sliding the switch to the '0' position and unplug the appliance.
- Allow to cool before storing away.

**IMPORTANT!** Always keep the rear of the appliance away from the hair during use, to prevent it being drawn in through the rear air filter.

#### Heat Settings

There are 2 heat settings for general styling and a cool setting. Use the cool setting on warm hair to set the style and achieve lasting effect. Slide the 'on/off' switch to the first position for the cool setting '\*', the second position for the low heat 'l' and the third position to select high heat 'll'. If you have delicate, fine or coloured hair, use the lower heat setting. For thicker hair, use the higher heat setting.

#### CARE & MAINTENANCE

To help keep your appliance in the best possible condition follow the steps below:

- Ensure the appliance is switched off, unplugged and cool. To clean the outside of the appliance, wipe with a damp cloth. Make sure that no water enters the appliance and it is completely dry before use.
- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

#### Cleaning the Rear Filter

- Unplug the appliance and let it cool completely before cleaning it.
- Holding the handle of the appliance firmly twist the rear filter anti-clockwise until the raised rib aligns with the "open" arrow on the appliance housing.
- Using a soft brush, clean any hair and other debris from the filter.
- Replace the rear filter by twisting back into position until the rear filter clicks into place.