

CLEAR WATER MADE SIMPLE

- Ultra-Activated® Carbon removes odors and discoloration.
- Dense, dual-sided mesh catches debris and fish waste.

INSTRUCTIONS

1. Detach clip from Aerobic Frame and slide the filter bag over the frame.
2. Add one packet of Ultra-Activated Carbon.
3. Press the Aerobic Frame flaps down over the top of the filter bag and press the clip down over the flaps.
4. Rinse filter cartridge under cool tap water to remove carbon dust.
5. Insert new filter cartridge into filter.
6. Replace monthly or more often if there is reduced water flow.



For best results, change filter cartridge monthly. After 30 days the carbon begins to lose effectiveness.