

76x101mm 8P 2019.6.17

NOSE/EAR HAIR TRIMMER ATTACHMENT:

1. Slowly and carefully insert the nose or ear hair trimming attachment into the nostril or the ear.
2. Rotate trimmer in a circular motion while gently moving in and out of the nose or the ear.

CLEANING, CARE AND MAINTENANCE:

Note: Always clean grooming kit attachments regularly to ensure maximum performance and a prolonged life.

CLEANING THE COMB ATTACHMENT:

1. Remove the comb attachment.
2. Rinse the comb attachment with water and let it dry completely.

CLEANING THE HAIR & BEARD TRIMMER ATTACHMENT:

1. Use your thumb to remove the attachment of the trimmer.
2. Use the given cleaning brush to remove any remaining hair from the trimmer.
3. Wash the blade assembly under running tap water. Wipe the blade assembly with a cloth. Let it dry completely then attach it on the trimmer.

CLEANING THE NOSE/EAR HAIR TRIMMER ATTACHMENT:

1. Take the nose/ear hair trimmer attachment off from the trimmer.
2. Rinse it with water and let it dry completely before reusing it.

TECHNICAL DATA:

Model No.: HT333K
 Battery charging time: 2 hours
 Running time: 60 minutes when fully charged
 Battery: 1 Li-ion 14500 500mAh, 3.7VDC
 Power Supply Voltage: AC100-240V



Helpline - 1800 102 8787

www.syska.co.in

CRAFTED IN KOREA



UltraTrim
Pro Styling Kit



HT3333K

INSTRUCTIONS:

- For the best performance it is recommended to use this trimmer as per the instruction manual.
- Kindly retain this instruction manual for future reference.

NAME OF COMPONENTS:



1. Beard trimmer
2. 0.5mm stubble trimming
3. On/Off switch
4. Precision trimmer attachment
5. Nose/ear hair trimmer attachment
6. Stubble comb with 10mm beard length settings

INTENDED PURPOSE:

The grooming kit is designed for trimming and shaping the beard. The grooming kit is only intended for personal use and it is not suitable for commercial purpose. The product is for indoor use only.

NOTE: Please observe the below instructions:

- Store the device in a cool & dry place. Always clean the device before storing it for a longer period of time.
- Keep the device out of the reach of children and people with limited abilities.

BATTERY CARE:

1. Protect the battery against misuse, electrical damages and fire hazard.
2. Do not expose the device to direct sunlight or heat. The ambient temperature should not be lower than -10 °C and higher than 40 °C.
3. The trimmer must be charged with the original accessories supplied inside the box.

TO AVOID RISK OF MATERIAL DAMAGE:

1. Only use the original accessories and attachments supplied inside the box.
2. Never place the device near any heat source or open fire.

CHARGING:

- NOTE:
- Before the device is used for the first time it should be charged for at least 120 minutes.
 - When the battery is fully charged, the trimmer can be used for approximately 60 minutes.

TO CHARGE THE DEVICE:

1. Switch off the device.
2. Connect the charging adaptor to the connector of the device.
3. When charging: Blue battery icon on the device will light up.

CAUTION!

Please use the trimmer carefully to avoid any risk of injury. Never use the hair trimmer in a bath tub or under a shower. There is a risk of an electrical hazard even if the hair trimmer has been switched off.

CHANGING THE TRIMMER ATTACHMENTS:

- Switch off the hair trimmer before you mount or change the attachments:
1. To remove and change the trimmer attachments, use your thumb to push the attachment back and push off the hair trimmer.



2. Insert the attachment into the head-base slot. Hold the attachment and push the head-base gently.
3. Align the locking buckle and push the attachment into the slot. When you hear a "click" sound, it is done.

CHANGING THE COMB ATTACHMENTS:

1. Mount the comb attachment and carefully push the corresponding comb attachment on to the trimmer.
2. Push the bottom end of the comb attachment firmly until it locks.
3. If you would like to remove the comb attachment, release it from its bottom end.



BEARD TRIMMER ATTACHMENT:

1. Comb the beard in the direction of growth.
2. Trim the beard downwards from the ear to the chin.
3. Use the beard trimmer attachment without the comb attachment to trim the beard, the moustache or the hair at the contours short. The cutting edge of the beard trimmer should be pointed towards the beard at a right angle.
4. Push the stubble comb attachment to lock a desired trimming length between 1mm to 10mm.
5. Place the comb attachment with the rounded side up against the beard and start trimming upwards against the direction of beard growth.
6. To trim your moustache, first comb it straight down. Then use either the beard trimmer attachment or the precision trimmer attachment. Start from the middle of your lips. It is recommended to trim one side and then the other.

For better trimming, always keep the stubble trimming switch to 2 when using it with Stubble Comb attachment.