

GETTING STARTED

We've put everything you need to get started with your K600 TV keyboard right here. If you still have questions browse the topics on the left.

1 Plug the receiver into the back of your TV or computer.

2 Remove the battery tab on the back of your K600 TV and make sure it's turned on.

3 Set-up your K600 TV and optimize it for your system at k600setup.logi.com.

NOTE: Some keys won't be active before completing this step.

If you're a PC-to-TV user, download the Logitech Options app to customize your K600 TV. You can download Logitech Options [here](#).

NOTE: Smart TV users can skip this step.

If you are unsure of your TV compatibility you can go to TVcheck.logi.com.

Product Overview



1. Mouse left/right click buttons
2. TV or computer shortcuts
3. Easy-Switch keys
4. Media keys
5. D-pad
6. Touchpad