

# TROUBLESHOOTING GUIDE:

A. The filter in the air fryer is only used to filter the excess grease in the food, and the filter is removable. It is a wrong way to use the food to pour out the food directly from the air fryer after the food is cooked.

The correct way is: use the food clips to remove the food from the air fryer, or use the filter handle to remove the food and filter from the air fryer.

B. Do not start the air fryer without food in the air fryer.

C. When cleaning the basket and filter, customers must use a soft cleaning tool after the basket and filter are cooled to avoid damage to the non-stick layer.

D. The air fryer adopts a fast air circulation system, and the fan sound will work at full strength during use.

E. We indicate the size of the fryer on Amazon, because we cannot predict the size of the customer's kitchen. The customer thinks that the fryer is too large, maybe it is the wrong choice of the customer.

F. After the food is cooked, please use the food clip or take out the filter and the food together.

G. When there is no food in the basket, please turn off the air fryer.

H. Please cut off the power supply when it has not been used for a long time