

can set clean time ; Press the right "ON/OFF"button to start cleaning and the Working Indication Light will be on. Left "TEMP+"and "TEMP-"is temperature set button , Press them can set heat temperature ; Ifyou want heat, please press the left"ON/OFF"button,and the Working Indication Light will be on.

ADJUST:The right knob will be Rotating around, you can adjust to the power. e) During cleaning, the"ZiZi" noise is normal.

f)After cleaning time over, or press"ON/OFF"button to stop.For another cleaning cycle, just repeat above process.

g)When cleaning is over,unplug the unit.Open the cover,take the cleaned article out and drain the water.

E、OUR WAYS OF CLEANING

a)GENERAL CLEANING:Use only plain water for general cleaning.The water should merge the item to be cleaned

b) ENHANCED CLEANING: When the item is smeary of extraordinary dirty. Please add about 5-10ml of detergent into water to enhance cleaning result.

c)CLEANING BY PARTS:For large items,partly cleaning as shown.

F、USER MAINTENANCE

a) Unplug and empty the unit after using. (Do not keep water in the tank for a long time)

b) Wipe the tank and housing with dry towel.(Do not wash the unit with water to avoid electric shock.)

c)Keep in cool and dry place.

G、DIRT ELIMINATION PROCESS THROUGH ULTRASONIC TECHNOLOGY

a) Many tiny bubbles are generated under the action of ultrasonic.

b) Bubbles are imploded constantly under the action of ultrasonic to impact the surface of the item.

c)The impact splits up the dirt into many granules and separates them from the surface of the item,the granules then come into water.

ULTRASONIC CLEANER

MINIATURE SERIES

MANUAL

AVAILABLE FOR:

Jewelry:Necklaces,Rings,Earrings,Bracelets,etc.

Glasses and Timepieces:Glasses,Watch Chains,Waterproof watches,etc.

Commodities:Electric shaver heads,Razor,Dentures,Combs,Toothbrushes,etc.

Stationery:Pen-heads,Printer-heads,Seals,etc.

Metal Articles:Watch Parts,Ancient coins,Badges,Values,Machine nozzles,etc.

Metal Dishware:Forks,Knives,Spoons,etc.

A、SPECIFICATIONS:

TYPE PAR. ITEM	TH-08 TH-08A	TH-10 TH-10A	TH-20 TH-20A TH20AL	TH-30 TH-30A TH:30AL	TH-40 TH-40A TH-40AL	TH-60 TIH-60A TH60AL	TH-80 TH-80A TH-80AL	TH-100 VOOI-HL TH-100AL.
IRLOLLN CY	40KHZ	40KHZ	40KHZ	40KHZ	40KHZ	40KHZ	40KHZ	40KHZ
POWER	50W	70W	120W	180W	240W	360W	480W	600W
TIMER	1~30min	1~30min	1~30min	1~30min	1~30min	1~30min	1~30min	1~30min
PRODUCT	180*165*175	180*165*180	265*165*210	330*180*280	330*270*280	330*330*280	530*330*280	530*330*330
TANK SIZE	150*135*65	150*135*100	240*135*100	300*150*150	300*240*150	330*300*150	500*300*150	500*300*200
CAPACITY	1.3L	2.0L	3.2L	6.5L	10.0L	15.0L	22.0L	30.0L
HEATER	0	SOW	100W	200W	250W	400W	600W	800W
WEIGHT	2.5kg	2.5kg	4.0kg	6.0kg	8.0kg	10.0kg	14.0kg	16.0kg
POWER SUPPLY: AC220V 50Hz / AC110V 60Hz(Optional)								

B、IMPRTANT SAFETY INSTRUCTIONS

(WARNING:To reduce the risk of burns,electrocution,fire or injury to persons!)

- a)Do not disassemble the unit except for the authorized serviceman.
- b)Unplug the unit before filling.Do not exceed the MAX mark.
- c)Do not touch the socket with wet hand to reduce the risk of electrocution.

d) Use this unit properly as per its instruction manual.Do not use attachments not recommended by the manufacturer.

e)Do not immerse the unit in water to reduce the risk of electrocution.

f)Do not use this unit when sleeping or drowsy.

g)Never operate this unit if cord or plug is damaged.If it is not working properly,damaged or has been dropped into water,return the damaged unit to a service center for examination and repair.

C、SAFETY INSTRUCTION:READ ALL INSTRUCTIONS BEFORE USING (DANGER:To reduce the risk of electrocution!)

a) Unplug this unit immediately after using.

b) Keep the unit away from heat,and place it in a dry and level surface.

c)Keep the unit in a safe place to avoid falling into water or other liquid.

d)The unit should never be left unattended when plugged in.

e) Do not use while bathing.

f) Do not immerse the unit into water or other liquid.

g)Do not reach for the unit that has fallen into water unplug immediately.

D、OPERATION INSTRUCTIONS

a)Open cover and place the items into the cleaning container,then fill with water. (the water should cover the item but not exceed the ruling mark!)

b)Running without water can damage the unit!

c)Close the cover.Plug in unit to electric outlet.

d)MACHINE:The right knob can set the clean time.When the right knob

will be rotating around,you can set clean time ; then it'll cleaning and the Indication Light will be on. The left knob can set the temperature.When the left knob will be rotating around,you can set heat temperature ; When heater is work the Indication Light will be on.

DIGITAL:Right"TIME+"and"TIME-"is time set button,Press them