

User Manual

L169 Digital Voice Recorder

Aftersale service: support-us@aomago.net

Website: <https://aomago.net/>

Thanks for purchasing Voice Recorder from AOMAGO

- L169 Package List

1 x Voice Recorder

1 x MICRO USB Cable (for data transfer and charging)

1 x User Manual

- Product Warranty

1 year warranty and 18 months for AOMAGO VIP.

We highly recommend you register at our site to receive an extended warranty (18months), to verify the product authentication, and to have better customer service.


Registration is free.

Register VIP: <https://aomago.net/> or email support-us@aomago.net to register VIP and receive an extended 18 Month Product Warranty

Please feel free to contact us if you have any question during using our product, you can contact us for a replacement if it is a quality problem.

Write the issues with model number or amazon order ID, so we can reply to you effectively.


Product description of each part:

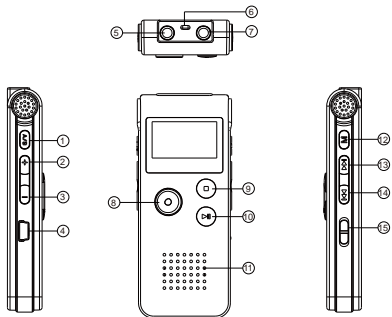

①	A-B	⑨	Stop key
②	Vol+	⑩	Play/Pause
③	Vol-	⑪	Inner microphone
④	USB jack	⑫	Menu key
⑤	External Microphone Jack	⑬	Previous
⑥	Earphone Jack	⑭	Next
⑦	Hanging Hole	⑮	ON/OFF
⑧	Record key		

The basic application method:

 - Main function section



Record play

Systemg

Music

- Special button operation specification

In the manual, “short press”“long press” appear frequently, their meanings as follows:

1. **Short press:** After pressing the button, then leave the finger immediately.
2. **Long press:** After pressing the button, keep it for a while , until the screen with related contents.

The basic application method

- Turn on the power

1. Check the inner lithium battery enough or not.
2. Set the “**ON**”, after initialization, the screen with “play record interface”

● Turn off the power

1. When the machine is in standby mode, set to "OFF", then the machine turned off;

2. When the machine is in the stop state, press the "PLAY" button for a few seconds, the machine shutdowns after showing "Bye-Bye", which can only turn off the working state, can't turn off the power. If no use in a long period, please turn off the power "OFF", which could save power.

3. During record, if the battery is going to use up, then it will shutdown automatically.

※ **Note:** Please stop the machine by "PLAY", then turn off the power by "OFF". If turn off the power directly, it will reset to defaults.

● Recording

1. **Start recording:** In any state of power-up, Short Press "REC" to start recording, At this point the recording indicator light is long on, The timing number moves at the top of the screen, That means it's in recording mode.

2. **Stop Recording:** Short Press "REC" or "PLAY" to pause recording during recording, The indicator light and the timing figure at the top of the screen flicker, Short Press "REC" or "PLAY" again to cancel the pause recording.

3. Save the recording: Briefly press the “**stop/return**” button while recording, The screen prompt “**saved**” after the display, Go to play standby, Short press play again to play the current recording.

● Play/pause

In the BOOT state, simply press the “**UP**” or “**DOWN**” button to select the “**Record**” or “**Music**” interface, Short press the “**MODE**” key to enter the play interface, Short press the “**PLAY**” button to start playing, Short press play again to pause/play.

● Tangent curv

In play mode, Short Press “**UP**” or “**DOWN**” to switch tracks.

● Music/recording mode switch

In the main menu interface, Long Press “**UP**” or “**DOWN**” to select “**Record**” or “**Music**” to switch with each other, Simply press the “**MODE**” button to enter the playback interface, Short Press “**PLAY**” to confirm play.

● Volume Control

In play mode, Short press the “**VOL**” key when the volume level appears on the screen, Press the “**VOL+**” button to increase the volume, Press “**VOL-**” to reduce the volume, The volume indicator bar on the screen will be added or subtracted accordingly. Once the adjustment is complete, Short Press “**PLAY**” to save the exit volume adjustment mode. (A 10-second no-action will automatically save the exit) .

● UP/DOWN selection, fast forward/fast back

In play mode, Simply press the “UP” or “DOWN” keys to select the previous file or the next file, Long Press “UP” or “DOWN” key to play fast forward/fast back.

● A-B repeat

In play mode, Just press “DEL/A-B” one time, Set the starting point for repeat **A**, Just short-press “DEL/A-B” again, Set the end point for repeat reading **B**, At this point the screen shows **A-B**, Press the “DEL/A-B” key again to repeat the function between the two points of **A-B**, Then short press the “DEL/A-B” key will exit the **A-B** repeat mode. (The default each time to read 5 times automatically back to normal playback).

● Delete

1. Single delete: Short Press “DEL/A-B” to enter the delete option on the standby or pause screen, Short Press “UP” or “DOWN” key to select (Delete one, Delete all, Exit settings), Then simply press the “MODE” button to enter, Short Press “UP” or “DOWN” to select “yes”, Then short press the “MODE” button to confirm the deletion, Screen prompt, “delete...”

2. Delete them all: The action is the same as a single delete.

3. Abort. Delete: To abandon the deletion, You can choose “No” to exit without deleting, Or simply press the “stop/return” button to exit.

※ **Warning:** The delete operation is a permanent delete, The file will not be recovered, Please be careful about deleting files.

● Play settings

Simply press the “ **MODE** ” button to enter the settings menu in the playback state (Play mode, Repeat settings, Variable Speed Playback, Equalizer) , Short Press “**UP**”or“**DOWN**” key to select.

1. Play mode: Short press the “**MODE**”button to enter the mode selection, Then Short Press “**UP**”or “**DOWN**” to choose (Repeat1, Repeat ALL, Shuffle) ,Short Press“**MODE**” key to determine.

2. Repeat Settings: Short press the “**MODE**” button to enter the repeat settings mode, Short Press “**UP**”or“**DOWN**” to choose (Repeat Mode, Replay Times, Replay Interval) Short press the “**MODE**” button to enter, Press the “**MODE**” button for confirmation shortly after you have made the necessary adjustments.

3. Variable Speed Play back: Short press the “**MODE**”button to enter, Short press the “**VOL+**”or “**VOL-**” button to select (- 8 to 8 adjustable) , To the desired level and then short press the “**MODE**” key to confirm.

4. Equalizer: Short press the “ **MODE** ” key to enter the sound MODE settings, Short Press“**UP**”or“**DOWN**” key to select (off、Rock、soft、Pop、Jazz、Classical、Techno) Short press the “**MODE**” button to confirm.

● System setup (SYS Settings)

In the main menu interface, simply press the “**UP**”or“**DOWN**” keys to select system settings, Short press the “ **MODE** ” button to enter the settings menu, Short Press “**UP**”or“**DOWN**” key to select.

1. Date & time Settings: Short press the “**MODE**” button to enter (Date setting, Time setting) , Select the date set after a short press the “**UP**”or“**DOWN**” key to select the year/month/day, Press “**VOL+**” or “**VOL-**” to adjust the number. After selecting the time setting, simply press the “**up**” or “**down**” keys to select hours/minutes/seconds, Press “**VOL+**” or “**VOL-**” to adjust the number, After setting up the short press the “**MODE**” key to confirm.

2. Screen saver time(Sleeper time): Short press the “**MODE** ” button to enter, Short Press “**UP**”or“**DOWN**” key to select (Always ON, 10Seconds, 20Seconds, 30Seconds), Then short press the “**MODE**” button to confirm.

3. Record settings: Short press the “**MODE** ” key to enter the recording settings, Short Press “**UP**”or“**DOWN**” key to select (**Record Format, set rec bit rate, Record from, Record Subsection, AVR mode, Monitor Setting, Rec Indicator, Timed recording**) .

(1). Recording format: Short press the“**MODE**” button to enter, Short Press“**UP**”or“**DOWN**”to select (MP3 format or WAV format) , The less time it takes), Then short press the “**MODE**”button to confirm.

(2). Set rec bit rate: Short press the“**MODE**” button to enter, Short Press“**UP**”or“**DOWN**”to select (**MP3 format: 32kbps, 64kbps, 128kbps, 192kbps or WAV format: 512kbps, 768kbps, 1024kbps, 1536kbps, 3072kbps**). This parameter is the recording sampling rate, The higher the sampling rate, the better the sound effect, The greater the power consumption. The lower the sampling rate, the worse the sound effect, The less time it takes), Then short press the “**MODE**”button to confirm.

(3). Record Subsection: Short press the“**MODE**”button to enter , Short Press “**UP**” or “**DOWN**” to select (off, 30Minutes, 60Minutes, 120Minutes) Then short press the“**MODE**”button to

confirm.

(4). Voice Control Mode(AVR Mode): Short press the“**MODE**”button to enter, Short Press “**UP**” or “**DOWN**” to select (Tar ck AVR mode, set level of AVR) Short press the“**MODE**”button to enter, Set up after the re-short press the“**MODE**”key confirmation.

(5). Listening switch(Monitor setting): Short press the“**MODE**”button to enter, Short Press “**UP**” or “**DOWN**” to select (**OFF**、**ON**),Short press the “**MODE**” button to confirm (When you select “**ON**”to record again, plug in your headphones to hear the sound you are recording) .

(6). Rec Indicator: Short press the“**MODE**”button to enter, Short Press “**UP**” or “**DOWN**” to select (OFF、ON),Short press the“**MODE**”button to confirm (Select“ON”when recording indicator light indication, There is no light indication when selecting“OFF”for recording) .

(7). Timed recording: Short press the“**MODE**”button to enter, Short Press “**UP**” or “**DOWN**” to select (**Record on/off**, **Timed Record Cycle**, **Start Time**, **end time**),Short press the“**MODE**”button to enter, Set up after the short press the“**MODE**”key to confirm.

(8). Record source (Record from): Short press the“**MODE**”button to enter, Short Press “**UP**” or “**DOWN**” to select (**Microphone**、**line-in**),Short press the“**MODE**”button to confirm.

4. Language: Short press the“**MODE**”button to enter,Simply Press “**UP**” or “**DOWN**” to select the language you want, Short press the“**MODE**”button to confirm when finished (Available in a variety of languages) .

5. Back light Timer: Short press the “**MODE**” button to enter,Short Press “**UP**” or “**DOWN**” to choose(**Always on** ,

10Seconds, 20Seconds, 30Seconds) ,Short press the“**MODE**”button to confirm.

6. Brightness: Short press the “**MODE**”button to enter, Press“**VOL+**”or“**VOL-**”to select the contrast brightness (00-11 optional) , Short press the“**MODE**”button to confirm.

7. Disk Space: Short press the“**MODE**”button to enter, Total machine capacity and used space can be queried, Short Press “**STOP**” to return to the settings menu.

8. Software Version: Short press the“**MODE**”button to enter, View local hardware and software information,Short Press “**STOP**” to return to the settings menu.

9. Password Settings: Short press the “**MODE**”button to enter,Short Press “ **UP** ” or “ **DOWN** ” to choose(**Password Switch, Password Set**) , Then short press the“**MODE**” button to enter,Press“**VOL+**”or“**VOL-**”to adjust the number, Short Press “ **UP** ” or “ **DOWN** ”to go to the next set of numbers to adjust,Set up after the completion of short press the “**MODE**”key to confirm.

10. Restore Factory settings: Short press the“**MODE**”button to enter, Short Press“**UP**” or “**DOWN**” to select“**yes**”or “**no**”, Short press the “**MODE**”button to confirm (If you select yes, the machine will revert to the factory state and all files will be cleared)

11. Format Device: Short press the“**MODE**”button to enter, Short Press “ **UP** ” or “ **DOWN** ”to select“**yes**”or “**no**”, Short press the “**MODE**” button to confirm (If you select yes, the machine will empty all files.

● **LINE-IN Recording setup** (You need to set the “Record from” Sub menu to “Line-in” in the recording setting)

1. Through the LINE-IN interface, Can Be connected (CD, MP3, DVD mobile) and other products output audio source direct audio

input

2. External microphone recording: After connecting the external microphone through the LINE-IN interface, The same way you record with a built-in microphone.

3. A recording of the call: After connecting the phone box through the LINE-IN interface, The same way you record with a built-in microphone.



● Connect to the computer

1. Plug one end of the USB cable into the USB port, Plug in your computer's USB port at the other end, After connecting the computer will appear this disk symbol identification, At this point, you can locate the disk to upload/download the file, The display screen of the machine will also have the corresponding icon indication. As shown in the image below :



Downloading



Uploading files



Connecting

2. Please remove the removable disk in the normal way, To prevent data loss.

3. Connect the machine to the computer and use it as a removable USB stick, UPLOAD/DOWNLOAD your favorite music or other

files (Copy/paste mode) . Do not disconnect while data is being transmitted, Otherwise, it could cause data loss.

● Charging

1. Connect the USB cable to the charger (5V-1000MA) Ready to charge, Battery icon shows the status of running horse when charging, When the icon is full, it means the charge is full (The charging time depends on the power of the charger) .



2. When the machine runs out of power or not enough , Please charge in time , Keep the machine fully charged in all conditions, Otherwise, it will affect the service life of the machine .

Trouble shooting

Questions	Why	Measures
No display	Battery's low If it's on	Recharge in time Turn on the power
No recording	It's not on the record Memory capacity is full	Put It on tape Delete some files or move them to the peripheral equipment
Unable to play the audio file	There's no audio file Keep the volume to a minimum	Make sure there are no audio files Adjust the volume
The words on the display screen are out of orde	Whether the language choice is correct or not	Choose the right language

<p>No sound from headphones or speakers</p>	<p>Make sure your earphones are plugged in Keep the volume to a minimum The play file was corrupted</p>	<p>Remove headphones Adjust the volume Check that the playback file is intact</p>
<p>Unable to upload/download files properly</p>	<p>Check the USB cable for damage Whether the USB connection is normal or not</p>	<p>Plug check the USB cable is not damaged Connect USB cable properly</p>