

DANGER

Flammable Gas. Burn Hazard. Explosion Hazard.

Both the Searzall and torch are used with a highly flammable fuel gas, propane, which is contained in a tank. Failure to comply with these warnings and instructions may result in a gas leak, explosion or fire that may cause property damage, serious personal injury or death.

!WARNING!

INITIAL USE INSTRUCTIONS

!IMPORTANT!

THE FOLLOWING THREE STEPS ARE CRUCIAL TO THE OPERATION OF YOUR SEARZALL.

NEGLECTING ANY OF THESE INSTRUCTIONS WILL RESULT IN A POORLY FUNCTIONING AND/OR DAMAGED PRODUCT.

1 APPROVED TANKS AND TORCH HEADS

TANK →

- ✓ 16.4 oz “camping” propane gas cylinder tank. These tanks are easily found at hardware and camping supply stores



TORCH →

- ✓ Bernzomatic TS8000
- ✓ Bernzomatic TS4000



Do Not Use

- ⊘ 14.1 oz propane tanks (tall cylinders that are typically blue)
- ⊘ 14.1 oz MAPP or MAP-PRO cylinder tanks (tall cylinders that are typically yellow)
- ⊘ Iwatani Torch
- ⊘ All other tanks or torches that are not mentioned here, even if the information provided by the torch or tank manufacturer (on the website or otherwise) suggest that they can be used with the Searzall.

!WARNING


Misuse or improper use of any of these tanks or torches could result in a fire or explosion, causing severe personal injury or death. Carefully follow the warnings and instructions provided by the tank and torch manufacturers.

2 PROPER ASSEMBLY


The Searzall must be properly spaced in relation to the torch head. Improper spacing will compromise the structure of the Searzall’s inner screens and result in a failed product. To properly assemble and space the Searzall:

1. Make sure gas is turned to the off position on your torch.

2. Place the Searzall (a) on the adapter (b), loosen the thumbscrew (d). Align the thumbscrew with the slot in the adapter, and slide the Searzall all the way onto the adapter. Tighten thumbscrew. Your Searzall is now attached to the adapter.

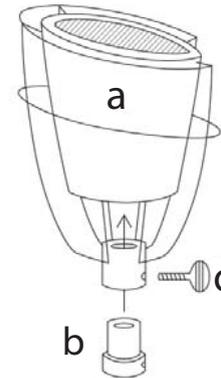


3. With the allen key (c), loosen the allen screw (f) in the adapter, and slip the Searzall (with adapter) over the torch head.

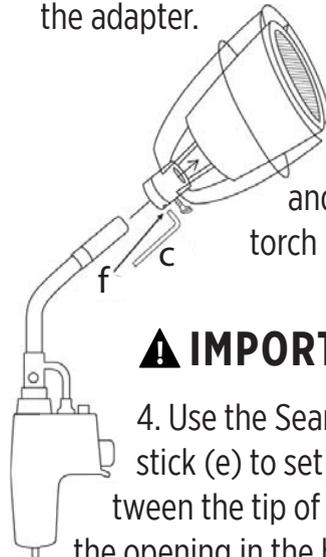

!IMPORTANT!

4. Use the Searzall spacing stick (e) to set the spacing between the tip of the torch and the opening in the back of the Searzall.

The space between the torch head and the back of the Searzall should be 1/8 inch or 3.25mm.

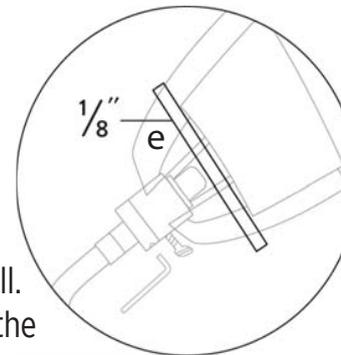


FAILURE TO SPACE YOUR SEARZALL ACCORDING TO THESE DIRECTIONS WILL DAMAGE YOUR PRODUCT.

BOOKER AND DAX SEARZALL

3 PRE-SEASONING

Before using the Searzall for the first time, you must complete the following first step.

! Once the Searzall is properly attached with 1/8 inch spacing, ignite the torch and hold it in a position where the Searzall’s front screen is parallel to and at least 4 feet from the floor.

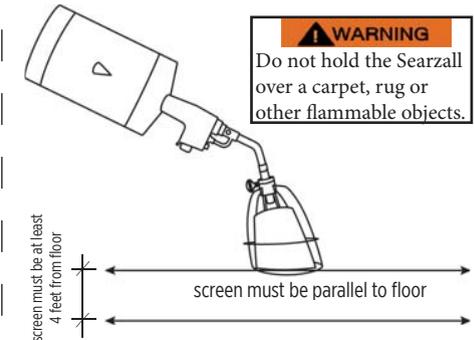

The torch must remain in this position for a full two minutes.

Once your Searzall has been pre-seasoned, it will be ready to use.

PRE-SEASONING THE SEARZALL IS CRUCIAL TO THE PROPER FUNCTIONING OF THE PRODUCT. FAILURE TO DO SO WILL COMPROMISE THE STRUCTURE OF THE SCREENS.

!WARNING

Failure to follow all warnings and instructions could cause a fire or an explosion, resulting in severe personal injury or death.