

Shoe Washing Bag User Manual

Introduction:

Thank you for purchasing our shoe washing bag. This product is designed to make washing your shoes easier and more convenient. Please read this user manual carefully before using the product.

Product Description:

Our shoe washing bag is made of high-quality polyester mesh, which allows water and detergent to flow through easily while protecting your shoes from damage. The bag is large enough to fit most shoe sizes and has a secure zipper closure to keep your shoes in place during washing.

Instructions:

1. Remove any excess dirt or debris from your shoes before placing them in the bag.
2. Open the zipper of the shoe washing bag and place your shoes inside, making sure they are not too tightly packed.
3. Close the zipper securely.
4. Place the shoe washing bag in the washing machine with similar colors and fabrics.
5. Use a mild detergent and wash on a gentle cycle with cold water.
6. After the wash cycle is complete, remove the shoe washing bag from the washing machine and remove your shoes from the bag.
7. Allow your shoes to air dry completely before wearing them again.

Precautions:

1. Do not wash shoes that are heavily soiled or covered in mud. This could damage the shoe washing bag and your washing machine.
2. Do not use bleach or fabric softener with the shoe washing bag.
3. Do not put the shoe washing bag in the dryer.
4. Do not wash shoes with metal parts or spikes in the shoe washing bag.

Maintenance:

1. After each use, rinse the shoe washing bag with clean water and hang it to dry.
2. If the shoe washing bag becomes heavily soiled, hand wash it with mild detergent and hang to dry.
3. Store the shoe washing bag in a cool, dry place when not in use.

We hope you enjoy using our shoe washing bag and find it helpful in keeping your shoes clean and looking their best. If you have any questions or concerns, please do not hesitate to contact us.

