

Connecting to the App

1. Download the App

Search for “Roborock” in the App Store or Google Play or scan the QR code to download and install the app.



2. Reset WiFi

Press and hold  and  simultaneously until you hear the “Resetting WiFi” voice message. The reset is complete when the power indicator light flashes blue slowly. The robot will then wait for a connection.

Note: If you cannot connect to the robot due to your router configuration, a forgotten password, or any other reason, reset the WiFi and add your robot as a new device.

3. Add Device

Open the Roborock app, tap the “Add Device” or “+” button and add your device following the in-app guide.

Notes:

- The actual process may vary due to ongoing app updates. Follow the guide provided in the app.
- Only 2.4 GHz WiFi is supported.

Instructions for Use

C1 Filling the Clean Water Tank

Open the dock cover, lift the clean water tank, open its lid, and then fill it with tap water. After filling, close the lid, lock the latch, and then put the clean water tank back to the dock.

Notes:

- To prevent damage, do not use any disinfectant and only use cleaning solution recommended by Roborock.
- Do not add too much cleaning solution to prevent the robot from working improperly due to slipping.
- To avoid deformation, only use cold water.
- If any water stains remain on the outside of the water tank, wipe them with a soft, dry cloth before reinstalling the tank.

Turning On/Off

Press and hold  to turn on the robot. The power indicator light will come on, and the robot will wait for orders.

Press and hold  to turn off the robot and complete the cleaning cycle.

Note: The robot cannot be turned off when it is being charged.

Starting Cleaning

Press  to start cleaning. The robot will plan its cleaning route and in each room, it firstly draws out edges and then fills the room in a zigzag pattern. In so doing, the robot cleans all rooms one by one, thoroughly and efficiently.

Notes:

- To make sure the robot returns to the dock automatically, start the robot from the dock and do not move the dock during cleaning.
- Cleaning cannot start if the battery level is too low. Allow the robot to charge before starting a cleanup.
- Before cleaning, tidy cords (including the power cord of the dock) and valuables from the floor. Loose items may be dragged by the robot, resulting in the disconnection of electrical appliances or damage of cords and property.
- If cleaning is completed in less than 10 minutes, the robot will clean the area twice.
- If the battery runs low during a cleaning cycle, the robot will automatically return to the dock. After charging, the robot will resume where it left off.
- The robot will retract the roller mop to clean the carpet. You can also set the carpet as a no-go zone in the app to avoid it.
- Before starting each cleaning task, make sure that the mop cloth has been properly installed.
- To protect your carpet from getting wet, the roller mop cover automatically slides out when the robot moves onto a carpet and retracts when it moves off.

Spot Cleaning

Press and hold  to start spot cleaning.

Cleaning range: The robot cleans a 1.5 m (4.9 ft) × 1.5 m (4.9 ft) square area centered on itself.

Note: After spot cleaning, the robot will automatically return to the starting point and wait for orders.

Pause

When the robot is running, press any button to pause it, press  to resume cleaning. Press  on a paused robot to send it back to the dock.

Note: Placing a paused robot on the dock manually will end the current cleanup.