

Care & Maintenance

Always make sure your grinder is unplugged before cleaning and after use. Remove the removable grinding chamber from the base by rotating it counterclockwise until it stops, then lift it straight up. Now rotate the cap assembly counterclockwise until it stops. Lift the cap assembly straight up. Wash grinding chamber components with mild detergent and water. NOTE: Do not put grinder base in dishwasher. Once both components are clean, make sure they are completely dry before reinstalling them in the grinder.