

Driver Installation

Method 1

1. Visit **Realtek** page and follow the path below to download the latest driver for your computer operating system.

Realtek Page > Downloads > Communications Network ICs > Realtek USB/ GbE/ 2.5GbE/ Gaming Family Controller Software

Method 2

1. Visit the page below to download the drivers directly.

<https://www.mediafire.com/file/t5c1h9wdcbmeet-r/RTL8156BG.zip/file>

Note

If you cannot download the driver from the ways attached, please contact our customer service.

2. Open the installation package you downloaded and run it.
3. Follow up the installation wizard to complete the installation. Restart your computer when installation is finished.

