

Inflatable Stand Up Paddle Board Manual

Safety Caution:

- Never go stand up paddle boarding if you are not familiar with the area and surroundings. Learn the basics of using your SUP board in flat, calm water.
- Never paddle alone, only paddle with a friend or an experienced paddle partner who has local knowledge.
- Stay up to date about current and future weather conditions, including potentially dangerous conditions. Never go paddling in strong or offshore winds. Never go paddling on an outgoing tide or strong tidal currents.
- Never use the paddle board near boat traffic, other vessels, weirs, sluices and any other hazard.
- Never use the paddle board in situations where you could hurt others, e.g. bathers and swimmers at the beach.
- Do not use this board in surf or large waves until you are confident. We do not recommend this SUP board in surf or large waves. This board is designed as an all-around board for flat water and cruising conditions.
- Never allow minors to use this board without adult supervision.

Limit exposure of deck side to direct sunlight.

The suggested Max pressure for using is 12-15 PSI, do not over inflate. Do not leave out in the sun while inflated for periods longer than 24-48 hours. Hot air temperatures can cause pressure changes in the board possibly damaging the paddle board. **Keep your board in a shaded area when not in use.**

Excessive sun exposure can potentially damage the non-slip traction pad of your paddle board. When in use, the water has a cooling effect on the traction pad and

helps regulate the surface temperature, When the traction pad is dry, heat absorption is amplified when exposed to directly sunlight. If must expose your board to direct sunlight during transport or temporary storage, it is safest to keep the bottom of your board facing up. **Never leave the deck pad of your board exposed to the sun when not in use.**

Board Features

- 10.6 or 11.6 ft length, 32" width and 6" thick
- Drop-stitch PVC technology
- Suggested Max pressure 12-15PSI
- 3 FINS Set UP: 1 central fin and 2 side fins

Package Includes:

- Paddle Board
- Aluminum Paddle
- Double Action Hand Pump
- Backpack
- Safety Leash
- Shoulder strap
- Storage strap
- Repair Kit

Set Up/ Assembly

The Paddle Board is fitted with an industry standard valve with a simple push button system. **Valve pin should be UP for inflation** - this ensures all the air does not leak out.

Take the board from the box or ventilated storage bag and release security/storage strap, un-roll the board with the Deck Pad UP and the Fins Down.

For travel and carrying, the paddle can be separated into 3 smaller sections.

We always recommend wearing a leash when riding your board. Before paddling, attach your SUP leash to your board. Remove your leash after you've finished paddling to prevent snagging. Wrapping your leash around the board and fins can result in damage to the leash.

Do NOT tow or drag people or other vessels using the anchor rings as a connector. They are meant for SUP leashes only.

You will find an emergency repair kit with the SUP boards for small tears and/or leaks. Also includes a valve wrench for tightening the high-pressure inflation valve.

Valve wrench should only be used for leaking valves. Should you hear air escaping around the edge of valve, only use to tighten by turning clockwise. Use a reasonable amount of force.

Only tighten the valve when the board is completely deflated. Valve wrench should NEVER be used to deflate the board. Improper use of this tool will void the warranty.

Inflation and Deflation

Inflation:

You will find that you will reach 8 PSI in about 4-5 minutes. Once at 8 PSI take a short break if need it (depending on how you are feeling, do not overexert yourself), then pump it to the 12-15 PSI range.

NOTE: This SUP board is not warrantied against over inflation.

Deflation:

When you are deflating your board, clear any water, sand, dirty and debris out of the valve areas. Slowly, push down on the valve stem to start letting air out of the board. There will be a loud, initial burst of air which will slow down very quickly. The air will release very quickly as the board is inflated at a high pressure so please be prepared for a windy moment and a lot of noise.

Storage

Our boards are constructed with strong PVC to provide protection from ultraviolet light. Store your board where it will not be exposed to weather and direct sunlight.

- Fully deflate your board and remove the center fin.
- Clean and check your board after each use. Rinse your board with fresh water thoroughly. Remove any sand, dirty, or salt water build up. Use a mild soap if needed, and avoid any heavy chemical-based products. **Make sure your board completely dry before storage.**
- Roll your board from nose to tail. Leave the inflation valve open when rolling. Once the boards are fully rolled up, close and lock the inflation valve in the up position. Secure the board strap around your board.
- When storing your board, keep it in a clean and dry place out of the elements and away from major temperature changes. **Do not store your board outdoors for long periods of time.**

Warranty

1-year manufacturer limited warranty on all inflatable paddle boards from date of purchase. Abnormal defects in materials and workmanship are guaranteed. We reserve the right to replace or professionally repair the board, accessories or parts or replace with an equivalent product at no cost to you. This warranty does not cover the claims and/or conditions below:

- Damage or defects caused by use outside the product's intended purpose.
- Damage or defects caused by impact with objects or materials (other boards, rocks, sharp objects, docks, etc.)
- Damage or defects caused by transport, loading, dropping, or handling.
- Damage or defects caused by considered to be normal wear and tear.
- Damage or defects caused by inappropriate storage in temperatures under 0°C or over 32°C.
- Damage or defects caused by overheating and /or exposure to direct light while not in use.
- Damage or defects caused by wave impact or impact with lake or sea floor.
- Damage or defects caused by storage of the board in closed, damp conditions or by storage of a wet board in closed, damp conditions.
- Damage to the fin or fin box caused by impact to the fin.

Items Not Covered Under Warranty:

- Minor cosmetic issues
- Commercial use
- Customers modifications of the board, paddle, and/or accessories.