

Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.


NINJA PERFECT CLEAN TECHNOLOGY

All you need is a little maintenance and you'll enjoy delicious coffee, mug after mug.


STEP 1: CLEAN CYCLE - Will take **60 minutes** to complete.



1. CLEAN light illuminates on the unit.

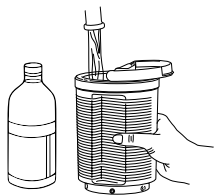

2. Fill reservoir to Max Fill line with descaling solution* and water or white vinegar** and water.

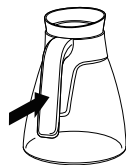

3. Place empty carafe under brew basket.




FULL

4. Select Full Carafe size.



5. Press CLEAN button. Countdown will begin on clock display.

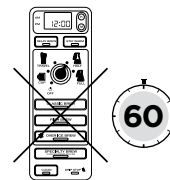

6. During 60-minute Clean Cycle, do not press any buttons. Unit may dim.

 
*Descaling solution is available from ninjakitchen.com. Follow your solution's recommended concentration level.

**Fill the water reservoir to the Travel Mug line (16 oz) with white vinegar, then add water to Max Fill line.


STEP 2: FLUSH CYCLE - Must start within **15 minutes** of Clean Cycle finishing.




7. FLUSH will scroll across the clock display.



8. Empty and clean carafe and reservoir.†

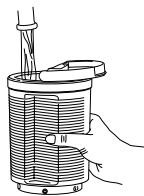


9. Fill reservoir with water to the Max Fill line.

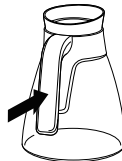

10. Place empty carafe under brew basket.



11. Press CLEAN button. Machine will pause briefly.

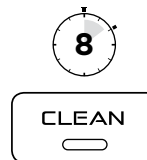

12. During 8-minute Flush Cycle, do not press any buttons. CLEAN light will turn off when complete.

†CAUTION: Do not immerse coffeemaker in any liquid.

If the 15-minute period after the Clean Cycle has passed, you must run the Clean Cycle again for the CLEAN light to turn off.

4-digit Date Code (located on plug prong): First two numbers between 33-52, last number is 16, or first two numbers between 00-14, last number is 17. CF08X