

## Troubleshooting Steps:

Page 8

### IMPORTANT NOTES

During shipping or in the course of normal play, it is possible for scoring segments of this board to become temporarily jammed, resulting in a “frozen” board. If this occurs, the built-in Self Diagnostic Function of the e-BOARD Computer will be activated automatically. Your dartboard will run a self-test routine to determine which segment is stuck. An error message will flash on the display together with the number for the “Frozen” segment.

### Error Code Malfunction:

- OE rr 25 D Inner Bullseye
- OE rr 25 Outer Bullseye
- OE rr XX Single segment for the number displayed at "XX"
- OE rr XX D Double segment for the number displayed at "XX"
- OE rr XX T Triple segment for the number displayed at "XX"

Take the following steps immediately when the error message appears.

- a. Find the “frozen” segment according to the display.
- b. Press firmly down on the “frozen” segment until it breaks free and the loose fit is restored. Once the “frozen” segments are loosened, the error message should be gone and the board will continue to operate normally.

Page 9

### SELF-TEST

With the board turned off, press and hold the two single segments of #20. Power on the dartboard and watch the display. The segments will be displayed in sequence. If any of the segments are not displayed, the display is damaged.