

Care & Maintenance

- Do not immerse the scale in water or use chemical detergents to clean the scale.
- Use a damp cloth to wipe the scale clean.
- Do not place stress on the triangle ring when not using the scale.

Replacing the Batteries

When the display reads “**LO**”, battery power is low. Replace the battery.

1. Turn the scale over and open the battery compartment.
2. Remove the used battery and replace it with 1 new 3V CR2032 battery. Make sure the + side of the battery is facing up.
3. Replace the battery compartment cover.



Warranty Information

Product	Digital Luggage Scale
Model	EL19
Default Warranty Period	1 year
For your own reference, we strongly recommend that you record your order ID and date of purchase.	

TERMS & POLICY

Etekcity Corporation warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period.

Etekcity Corporation will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use for which the product is not intended. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Etekcity Corporation is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure or by user negligence, abuse, or use noncompliant with the user manual or any additional safety or use warnings included in the product packaging and manual.

This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Etekcity Corporation and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Extend Your Warranty by 1 Year

Register your product at www.etekcity.com/warranty to extend your 1-year warranty by an additional year.

Please fill out all required fields and include your order ID, place of purchase, and purchase date, if applicable.

Defective Products & Returns

If you discover your product is defective within the specified warranty period, please contact Customer Support via support@etekcity.com with a copy of your invoice and order ID. **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Customer Support

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Etekcity Corporation

1202 N. Miller St., Suite A
Anaheim, CA 92806

 
SUPPORT HOURS

Mon-Fri, 9:00 am-5:00 pm PST/PDT

Email: support@etekcity.com

Toll-Free: (855) 686-3835

*Please have your order invoice and order ID ready before contacting Customer Support.

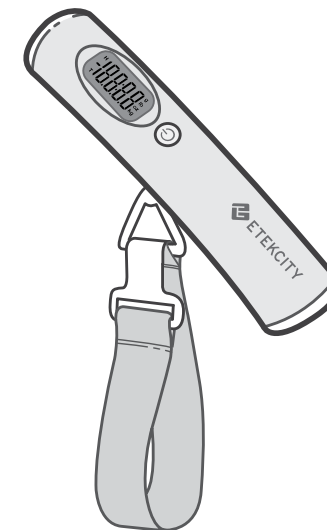

Digital Luggage Scale

Model: EL19

User Manual

Package Contents

1 x Digital Luggage Scale
1 x 3V CR2032 Battery (Pre-Installed)
1 x User Manual

Specifications

Weight Capacity	110 lb / 50 kg
Units	oz / kg / g / lb
Graduation	0.35 oz / 10 g
Battery	1 x 3V CR2032 Battery (Lithium)
Dimensions	5.7 x 1.4 x 1.2 in / 145 x 35 x 30 mm
Auto-Off	60 seconds

Important Safety Information

 
Follow all instructions and safety guidelines. Read all instructions before using.

- Do not exceed 110 lb / 50 kg, including the tared weight of the container. The display will read "Err" if the weight exceeds the limit.
- This scale is not intended for commercial or heavy-duty use. Household use only.
- Do not throw or strike the scale and do not submerge the scale in water.

SAVE THESE INSTRUCTIONS

Function Diagram

- A. Display
- B. Power Button
- C. Scale Body
- D. Battery Compartment
- E. Triangle Ring
- F. Belt
- G. Hook

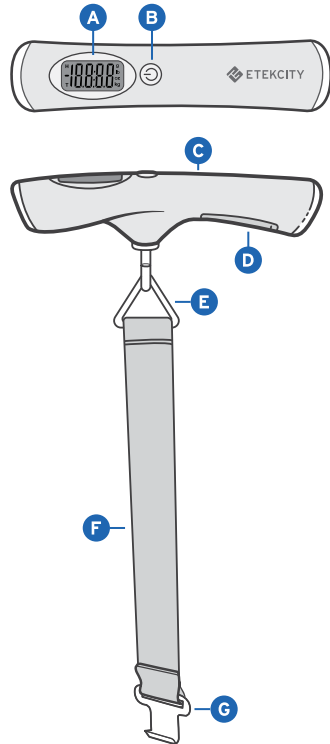

Before First Use

1. Open the battery cover. If necessary, use a tool to open.
2. Remove the insulation strip from the battery. [Figure 1.1]
3. When replacing the battery, make sure the + side of the battery is facing up. [Figure 1.2]
4. Replace the battery cover.

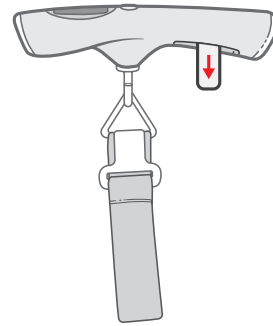 


Figure 1.1

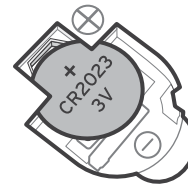 



Figure 1.2

General Operation


Weight Measurement

1. Press  to turn on the scale. Wait for "0.00" to appear on the display.




2. Wrap the belt around the handle of your luggage and place the hook on the bottom of the triangle ring.
3. Lift the luggage with the scale and hold still until the weight measurement stabilizes. The display will show the weight and "H" (Data Hold).



Note: Do not move the scale during measurement.

4. To measure another item, remove the luggage and repeat steps 2 and 3.
5. Press and hold  for 3 seconds to turn the scale off.

Data Hold Function



Once the weight has stabilized and "H" appears on the display, the weight will stay on the screen for 60 seconds, or until you measure another object. You can also press  to reset the display.

Unit Conversion

1. Press  to turn the scale on.
2. Before the display reads "0.00", press  repeatedly to switch between grams (g), pounds (lb), ounces (oz), and kilograms (kg).

Tare Function

You can use the Tare function to weigh an object inside a container by subtracting the weight of the container from the total weight.

1. Press  to turn on the scale. Make sure the display reads "0.00".
2. Wrap the belt around the handle of the container and place the hook on the bottom of the triangle ring. Allow the weight to stabilize until "H" appears on the display.
3. Hold the scale stable and press  to tare. The display will show "T".
4. Place the item you want to weigh inside the container. The scale will measure the contents without including the weight of the container.