

Safety Instructions for Arlo Baby

Heed all warnings in this document and warning labels attached to the camera, cords, and accessories. Failure to do so could result in injury.

- STRANGULATION HAZARD – Children have STRANGLED in cords. Keep cord out of the reach of children (more than 3ft (0.9m) away).
- NEVER place the camera or cord in or near crib or playpen. Secure the cord at least three feet away from crib or playpen.
- NEVER mount the camera directly above crib or playpen to avoid the risk of injury.
- NEVER use extension cords with AC adapters. Only use the AC adapters provided.
- CHOKING HAZARD – This product contains small parts which may cause choking. Keep small parts away from children.
- ELECTRIC SHOCK WARNING – Never use this device near water, including near a bathtub, sink, laundry tube, wet basement, etc.
- This product and accompanying accessories are NOT toys. Do not allow children to play with them.
- This product is NOT intended to replace proper supervision of children. You MUST check your child's activity regularly.
- This product is not intended for use as a medical camera and its use should not replace adult supervision.
- Only a battery pack of the same type should be inserted by an authorized NETGEAR service center. There is a risk of explosion if the battery is replaced by an incorrect type.
- Unplug product during lightning storms

Recommended Safe Use

- It is essential that you check the operating range and condition of the camera on initial installation, and on a regular basis after that
- Check reception regularly. Test the camera before use and after changing camera location.
- Some adult assembly or installation is required. Keep small parts away from children when assembling.
- This product is intended for indoor use only.
- Clean the camera with dry cloth only.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other devices that produce heat.
- Only use attachments and accessories specified by the manufacturer.
- Only use with the stand, mount, and mounting screws specified by the manufacturer, or sold with the device.
- Unplug this device when unused for long periods of time.
- Do not touch the plug contacts with sharp or metal objects.
- This product should only be serviced by authorized NETGEAR service centers. Contact Arlo Support at arlo.com/support for RMA information.