

# WALKIE TALKIE INSTRUCTION MANUAL

## TO CHANGE THE BATTERY FOR WALKIE TALKIE:

- 1.REMOVE THE SCREW ON THE BATTERY DOOR WITH A SCREW DRIVER.(SEE FIG.2 )
- 2.OPEN THE BATTERY DOOR AND INSERT 3 PCS "AAA" UM4/LR03 1.5V BATTERY INTO THE BATTERY COMPARTMENT ACCORDING TO CORRECT POLARITY.(SEE FIG. 2 )
- 3.REPLACE THE BATTERY DOOR AND THE SCREW ON POSITION.

## BATTERY WARNING:

1. DO NOT MIX OLD AND NEW BATTERIES.
2. DO NOT MIX ALKALINE,STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.

## WALKIE TALKIE OPERATION

- 1.ROTATE THE 'VOLUME' KNOB TO POWER ON AND ADJUST SOUND LEVEL.
- 2.MOVE THE MIC CLOSE TO YOUR MOUTH.AND PRESS THE 'PUSH TO TALK ' BUTTON TO TRANSMIT YOUR VOICE.
- 3.RELEASE THE 'PUSH TO TALK' BUTTON FOR RECEIVING VOICE FROM THE SPEAKER.
- 4.ROTATE THE 'VOLUME' KNOB TO 'OFF' POSITION TO POWER OFF.

"Modifications not authorized by the manufacture may void users authority to operate this device"

## Note:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions:


- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## WARNING:

- 1.Batteries should be replaced by an adult.
- 2.Non-rechargeable batteries are not to be recharged.
- 3.Rechargeable batteries are to be removed from the toy before being charged.
- 4.Rechargeable batteries are only to be charged under adult supervision.
- 5.Different types of batteries or new and used batteries are not to be mixed.
- 6.Only batteries of the same or equivalent type as recommended are to be used.
- 7.Batteries are to be inserted with the correct polarity.
- 8.Exhausted batteries are to be removed from the toy.
- 9.The supply terminals are not to be short-circuited.
- 10.Do not dispose of batteries in fire,batteries may explode or leak.
- 11.Small parts not for children under 3 years age.
- 12.Do not touch or modify the internal components other than replace the battery.
- 13.Please keep this instruction manual for future use.

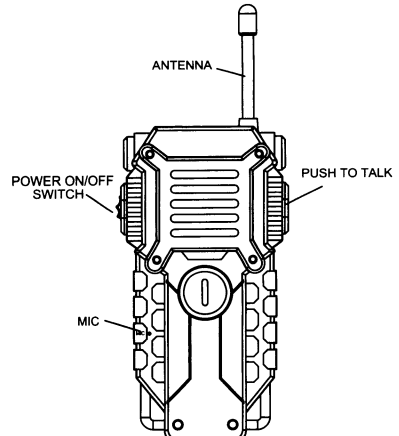

( FIG 1 )

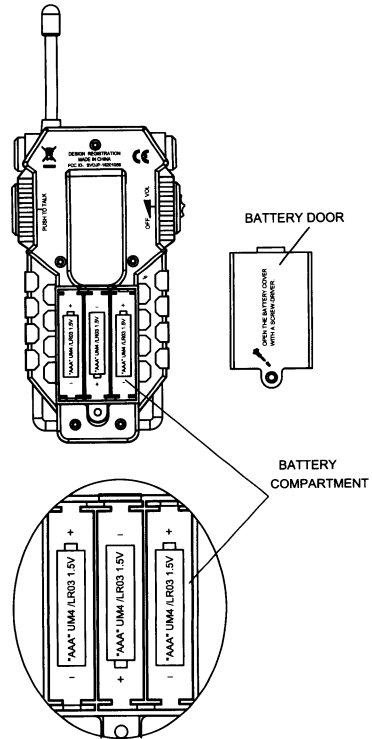

( FIG 2 )

**WARNING:**  
CHOKING HAZARD -Small parts.  
Not for children under 3 years



## **Sakar Warranty Card**

This warranty covers the original consumer purchaser only and is not transferable. It covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired at no charge for parts or labor for a period of one year.

### **What Is Not Covered By Warranty:**

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but not limited to, repair by unauthorized parties, tampering, modification or accident.

### **What To Do When Service Is Required:**

When returning your defective product (postage pre-paid) for service, your package should include:

1. Copy of **original** bill of sale
2. A detailed written description of the problem.
3. Your return address and telephone number (Daytime)

### **MAIL TO ADDRESS BELOW:**

In the U.S.  
Sakar International  
Attention: Service Department  
195 Carter Drive  
Edison, NJ 08817

In the U.K.  
Sakar UK  
2D Siskin Parkway East  
CV3 4SU, UK

You may also visit [www.sakar.com](http://www.sakar.com) for further assistance if necessary or call our technical support department toll free at 1877 397 8200 in the US, or 0-800-917-4831 in the UK.