















QUICK SET UP






The default Master Code is **12345678**






It is required that you change it to a code of your own before programming.





Change Master Code	  + Master Code + 	Press 1	New Master Code + 	New Master Code + 
	Wait for long green lights	Wait for green light flash	Wait for green light flash	Succeed Green light flash






Add User Code	  + Master Code + 	Press 2	New User Code + 	New User Code + 
	Wait for long green lights	Wait for green light flash	Wait for green light flash	Succeed Green light flash




 
Delete User Code	  + Master Code + 	Press 3	Unwanted User Code + 	
	Wait for long green lights	Wait for green light flash	Succeed Green light flash	


Silent Mode	  + Master Code + 	Press 4	1 + 	Silent Mode Disabled Green light flash
			2 + 	Silent Mode Enabled Green light flash

Auto Lock	  + Master Code + 	Press 5	1 + 	Auto Lock Enabled Green light flash
			2 + 	Auto Lock Disabled Green light flash

Set Auto Lock Time	  + Master Code + 	Press 8	Enter New Duration Time (10-99s) + 	
			Succeed Green light flash	

Add One-Time Code	  + Master Code + 	Press 7	New User Code + 	New User Code + 
	Wait for long green lights	Wait for green light flash	Wait for green light flash	Succeed Green light flash

Enable Vacation mode	  + Master Code + 	Press 6	Press 
	Wait for long green lights	Wait for green light flash	Vacation Mode Enabled Green light flash

Disable Vacation mode	Master Code + 
	Vacation Mode Disabled The door was opened

Notes:

1. Beeps only sound when the Silent Mode is disabled.
2. If the indicators flash red light, it means your setting failed and it will require to re-enter master mode if you would like to continue your programming.