



BMP[®]21-PLUS LABEL PRINTER
QUICK START GUIDE

REGISTER YOUR PRINTER

Register your printer online at www.bradycorp.com/register.

TECHNICAL ASSISTANCE

For troubleshooting and FAQs, visit:

<http://www.qualityserviceandsupport.com/brady>

Other technical assistance contact numbers can be found on the back cover of this manual. When contacting a representative, have your serial number (located inside the cartridge bay) available.



BATTERIES

1. On the back of the printer, squeeze the finger tabs located on both sides of the battery compartment door, then swing the battery compartment door up and out. (The door will come off.)



2. Insert 6 AA alkaline batteries or the optional BMP21-PLUS-BATT rechargeable battery pack. (Do not use rechargeable AA batteries or Ultimate Lithium AA batteries).

Note: The lithium ion battery pack accessory cannot be charged within the printer.

3. Re-insert the battery door hinge at the top of the compartment and push down on the battery compartment door, snapping it into place.

A/C Power

1. Insert the round end of the optional adapter cable into the plug-in port on the left side of the printer.
2. Plug the other end of the cord into an electrical outlet.



CHANGING THE LABEL CARTRIDGE

1. Turn the locking lever to the left to unlock the cartridge.
2. Push the eject button on the back of the printer.
3. Lift the cartridge out of the printer.



4. Place a new cartridge in the cartridge bay and push down until the cartridge snaps into place.
5. Turn the locking lever up (to the right).

Lanyard

If using a lanyard, attach it at the base of the printer.

 


WARNING!

The Lanyard is not a breakaway and could be a choking hazard!



KEYPAD

Function	Key	Description
Power		Turns on the printer.
Navigation		Moves the cursor up, down, left, or right in a line of text and in menus.
Enter		Adds a blank line in labels; accepts menu items.
Function		Invokes alternate functions (in yellow) on the keypad.
Backspace		Deletes characters and exits menus.
Clear		Clears data from the screen.
Label Type		Accesses installed label type templates.
Feed		Feeds labels through the printer.
Font Size		Provides font sizes and attributes
Caps Lock		Locks text in upper-case.
Print		Prints labels.
Multi-Print		Prints multiple copies of a label.
Menu		Sets printer defaults and other options.
Serial		Defines serialization values.
Backlight		Lightens screen in low light conditions.
Symbol		Accesses pre-defined graphics.
Barcode		Places text in bar-code format.
International		Accesses international characters.
Date		Inserts the date.
Time		Inserts the time.

 
English

For complete instructions on how to use all keys, functions, and label types, download the BMP®21-PLUS User's Manual. Go to: www.BradyCorp.com/Global.

POWER ON

1. Press **Power**  to turn the printer on.

DISPLAY SCREEN

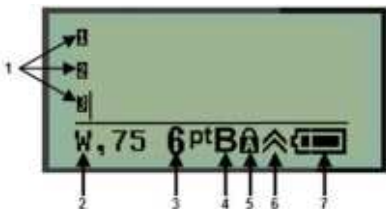

- | | |
|---|----------------|
| 1 | Text lines |
| 2 | Label type |
| 3 | Font size |
| 4 | Bold font (on) |

- | | |
|---|------------------------|
| 5 | Caps lock (on) |
| 6 | Function key indicator |
| 7 | Battery life indicator |

CREATE A LABEL

Entering Text

The vertical line is the cursor.

1. Enter text at the position of the cursor.

Note: The width of the label material installed or the orientation of the text determines how much text fits on a line. The error message “Cannot fit” displays if the text line is too long for the label or if the font size is too large. To correct, add a new line, change the font size, or delete some of the text.

2. To add a new, blank line for text, press **ENTER** .

Inserting Text

To insert additional text within a line of text:

1. Using navigation keys, position the cursor at the point where text should be inserted.
2. Enter the text.

Font Size

To change the size and attribute (i.e., bold) of the font:

1. Press **Font Size**  .
2. Press the Up or Down navigation arrows to choose the desired font size, then press Enter  .

Deleting Text

To remove characters, one at a time, from the position of the cursor TO THE LEFT (backwards):

1. Position the cursor to the right of the character you want to delete.
2. Press **Backspace**  , once for each character to delete.

Clear Data

 
To Clear all text on a label:

1. Press **Clear**  +  .

SAVE A LABEL

To save labels as a file:

1. Press **Menu**  .
2. Scroll down to **File**, then press Enter  .
3. Choose **Save**, then press Enter  .
4. Cursor to an open numbered field (blank field) and press Enter  .




5. In the *File Name?* field, enter a name for the file, then press Enter  .



OPEN A FILE

To open (recall) a saved file:

 1. Press **Menu** .
2. Choose **File**, then press **Enter** .
3. Choose **Open**, then press **Enter** .
4. Using navigation keys, choose the file to open, then press **Enter** .



PRINT A LABEL

To print a label:

1. Press **Print** .
2. When the label emerges from the printer, squeeze the cutter levers to cut the label.





Brady Worldwide Inc.

6555 West Good Hope Road

Milwaukee, WI 53223 U.S.A.

Telephone: 414-358-6600 USA Domestic

Facsimile: 414-438-6958

Websites

USA: www.bradyid.com.

Canada: www.bradycanada.com

Mexico: www.bradylatinamerica.com

Asia: www.bradycorp.com

Europe: www.bradyeurope.com

www.bradyeurope.com/services (Europe)

Phone Numbers

- 1-800-643-8766 (USA)
- 1-800-263-6179 (Canada)
- 44 1295 228 205 (UK)
- 01 800 112 7239 (Mexico)
- 55 11 3604 7729 (Brazil)
- 001-866-748-4424 (Latin America)