

GOLF NET INSTRUCTIONS

PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE.

NEVER let children unfold or fold this product without adult supervision.

Please follow assembly and maintenance instructions carefully to ensure the product is safe to use.

At least 4 people assemble this net.

STEP 1.

Unpack contents of carry case .Remove stakes and target from carry case .



STEP 2.

Assemble the frame as follows:

Insert two poles into each connector as shown in the picture.

Assemble the second horizontal frame section in the same way.



STEP 3.

Insert the vertical poles into the first section of the frame. Then insert the other end of the vertical poles into the second frame section. The completed frame is shown in the second photo.



STEP 4.

Fully unroll the cage net and fasten to the frame using the attached velcro strips.

(The side with little white square fabric is back upper side.)



STEP 5.

Starting at the upper poles, attached the velcro for each sides. Then attached the velcro of front and side poles. Finally is back and down poles.



STEP 6

Be sure the velcro attached for each side of the net.

Adjust the tightness of the net as needed.

Please note the height of back is shorter than front.

Then it can make a bevel bottom.



STEP 5.

Hang target net. The side with red webbing is upper side. Hang the hooks of target net on the plastic O-shaped ring of the body net.



STEP 6.

Hang target.

Locate out the O-shaped ring on the back seam of the cage.

Thread the string of the target through the O-shaped ring and hang the target on the back of the cage.

Finally, fix the stakes in the four corners on ground.

