

# Professional Hair Clipper User Manual



DESIGNED FOR THE PROFESSIONAL USE



## Attention

1. Long hair should be cut short with a hair scissors first.
2. Cover the cutter head with protective cap when the device is not in use.
3. Do not immerse the rechargeable hair trimmer into water.
4. Slight heating during the operating or charging is normal case.
5. Do not use adapters higher than 5V. Otherwise the adapter will be damaged. And the circuit board inside will be damaged!
6. After the battery life expires, take off and throw the battery in safe manner into the designated recycling site.
7. Keep away from children.

## Cleaning and Maintenance



Clean up the blade with



Clean the blade with water



Before or after use, maintain the blade by dropping some oil on the red point places

## Mount the limit comb

1. Align the limit comb with the cutter head.
2. Installation: The installation can be completed by aligning the limit comb groove with the cutter teeth and press downward of the limit comb tail buckle.
3. Disassemble: Press and hold the top of limit comb, push upward the limit comb.

## How to Charge?

1. Plug the charger into the bottom port. Turn on the power and start charging!
2. The bottom switch button displays red, indicating that charging begins. If it turns blue, it indicates that the battery is full!

## Parameters

Professional Hair Clipper	Use	Home & Barbershop Use
	Motor	Operating Voltage: 3.7 V
		Rated Power: 5W
		Motor Speed: 7100RPM
	Battery	Charging Time: 2 hours
		Working Time: 150 minutes
		Battery Capacity: 1400mAh
Waterproof	Waterproof Grade: IPX4	