


Troubleshooting



If any errors or malfunction occur, use factory reset at [SETTINGS → Factory Reset]. If that does not work, try hardware reset by pressing ③+④ together, and then press ①. Release all three buttons at the same time.

Charge the Watch

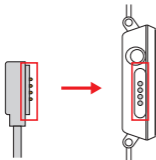

Battery/ Charging Information

Battery Specifications: 3.7V / 400mAh

Charging Specifications: 5V / 500mA

Clean the charging contact port frequently to ensure the charging efficiency.

1. Attach the magnetic charger on the charging contacts located on the side of the watch. Be sure the pins are aligned. Keep the watch on a stable surface while charging.
2. Insert the USB end of the charging cord into a computer USB port or CE/FCC certified 5V output USB charger (exceeding 5V will void the warranty).

⚠ CAUTION

AVOID touching the magnetic end of the charging cable with metallic objects to prevent short circuits and damage to the cable.

For safety reasons, after the watch is fully charged, disconnect the charging cable from USB power source.