

Method 2 Installation with screws (this is the preferred method)



Remove the battery
Unscrew the screws on the circuit board



Make a hole by drilling into the hole markers on the cover of the outdoor unit with drill or pointed object until it is open. Use the hole markers you just made to mark the location of where you want it installed. With the marked holes install the supplied anchor bolt, if needed.



Now you are ready to install the supplied screw into the expansion anchor bolt on the rear cover of the outdoor unit in the direction as illustrated in the figure with a screwdriver into the anchor.



Install the circuit board back on and place the cover back on the outdoor unit. All done.

Features

No batteries required for main receiver. Just plug it into an outlet.

High quality audio speaker.

Adjustable to 4 volume levels.

Easily select from 52 chimes/melodies available.

Each doorbell is set with a unique radio frequency code at the factory. This guarantees your doorbell will not interfere with other remote devices.

