

290x210mm 2020-3-1 单黑

- Make sure no water gets into the housing.
- DO NOT** immerse the appliance in water or other liquids. If this does happen, do not use the appliance again. For safety reasons, dispose of the appliance.
- Never use aggressive or abrasive cleaning products or utensils to clean the appliance.
- Remove the plug from the plug socket and allow the appliance to cool down completely.
- Clean the plates and the appliance's housing with a damp soft cloth.
- Use warm water and some washing-up liquid to dampen the cloth.
- Make sure the appliance is thoroughly dry before storing it.

Guidelines for Protection of the Environment

At the end of the useful life of the appliance, it should not be disposed of with general household waste. Check with your Local Authority or retailer for recycling advice in your local area. This symbol on appliances, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled by recycling used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of collection.

Discover our full range of exceptional Kitchen and Home products online at www.senseihome.com

Guarantee

This product is guaranteed for 1 year from the date of original purchase. If any defect arises due to faulty materials or workmanship, the unit will be replaced or repaired, where possible during this period at the discretion of the dealer from whom you purchased the unit.

The following conditions apply:

- The product must be returned to the retailer with original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- We accept no responsibility for incidental or consequential loss or damage.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by misuse or repair.
- Specifications are subject to change without notice.
- The guarantee is in addition to and does not diminish your statutory or legal rights.
- Valid in the UK only.

For technical queries, please contact:

MPH Home Ltd
Lyttelton House,
13 Freeland Park,
Wareham Road,
Poole, Dorset,
BH15 6SH

Customer Helpline: 0345 467 6743



Square Waffle Maker

Thank you for purchasing this product

You may already be familiar with using a similar product, but do please take time to read these instructions - they have been written to ensure you get the very best from your purchase.

Safety is important

To ensure your safety and the safety of others, please read the Product Safety information before you operate this product. Keep these instructions in a safe place for future reference.

Product Safety

Please read these instructions before operating the appliance.

Always use this appliance as described in these instructions.

- Always ensure that children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack experience or knowledge have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and

user maintenance shall not be made by children without supervision.

- Always keep the appliance and its cord out of reach of children less than 8 years old.
- Always use only accessories recommended by the supplier. The use of other accessories may result in damage to the appliance and will invalidate the guarantee and create a hazard for the user.
- Always take care to avoid being burnt, do not touch the hot parts of the appliance such as the cooking plates and the outside of the appliance. Allow to cool completely before handling the appliance.
- Always use oven gloves when opening and closing the unit to prevent burns.
- Always make sure the appliance has sufficient space around it and does not come into contact with inflammable materials. To avoid the risk of fire, the appliance must be able to release the heat that it produces.
- Always place the appliance on a stable, flat surface where it cannot fall over.
- Always make sure your hands are dry before you touch the appliance, the power cord or the plug.
- Always remove the plug from the plug socket in the event of a malfunction during use, before cleaning the appliance and before storing the appliance after use.
- Always clean the appliance thoroughly after use (see Maintenance and Cleaning). Allow the appliance to cool down completely before storage and/or cleaning.
- Always regularly check to see if there are any signs of damage to the supply

cord if it is, it must be replaced by the manufacturer, as service agent or similarly qualified persons in order to avoid a hazard.

- Never immerse the appliance, cord or plug into water or any other liquid. This is to protect against electrical shock.
- Never use this appliance for other than intended use. This appliance is for household use only.
- Never allow young children to use this appliance. Close supervision is necessary when this appliance is in use near children.
- Never let the power cord hang over the edge of a worktop, touch hot surfaces or become knotted, trapped or pinched.
- Never place on or near heat sources.
- Never leave this appliance unattended during use.
- Never touch the external surfaces of the appliance during use as they may become very hot.
- Never allow the appliance to touch flammable materials when in use, as this may be a fire risk.
- Never operate the appliance by means of an external timer or remote-control system.
- Never use this appliance outdoors.
- Never touch the metal parts of the appliance during use as they may become very hot.
- Never use on surfaces that may be damaged by heat. The use of an insulated pad or mat is recommended.
- Never use the appliance if it has been dropped or if there are any visible signs of damage.

Features

- Power indicator light
- Ready indicator light
- Locking clasp



220-240V 50/60Hz 1000W

Due to our commitment to continuous improvement, the actual product may differ slightly from the one illustrated in this guide.

Before First Use

- Unpack your waffle maker. You may wish to keep the packaging for future storage use.
- Remove all the packaging materials and stickers from the appliance.
- Clean both the non-stick plates and the outside of the unit with a soft damp cloth.
- Dry with a clean cloth or paper towel.
- Heat the appliance for 5 minutes prior to first use, this will burn off any manufacturing dust from the heating elements. The unit may emit slight smoke or an odour. This is normal and will soon disappear.

Using your Square Waffle Maker

- Insert the plug into a suitable electrical socket and switch on at the socket. The red power and green ready lights will illuminate. This is to show that the plates are heating.
- When fully heated the green ready light will go out. Open the lid.

- Lightly coat the cooking plates with a little cooking oil or cooking spray.
- Pour your pre-prepared batter into the centre of each plate, ensuring it spreads into each of the corners. Do not overfill as this will cause the batter to overflow out of the appliance.
- Close the lid using oven gloves and shut the plates using the locking clasp. The ready light will go on again during the cooking cycle as the appliance maintains temperature.
- Release the locking clasp using oven gloves and open the lid to check if the waffle is cooked to your liking. Watch out for any escaping steam.
- If not, close the lid and continue cooking until the desired result is achieved.
- Remove the cooked waffles with a non-metallic, heat proof spatula. Do not use metal utensils as this will damage the non-stick coated plates.
- When you have finished cooking, simply turn the unit off and remove the plug from the power socket.

- Combine the wet ingredients together and add this to the dry ingredients and beat until the batter is smooth. Leave to rest for 5 minutes.
- Spray the Waffle Maker with vegetable oil and heat the unit. Pour the batter into each recess and make sure the batter fills the moulds, do not overfill otherwise there will be overflow.
- Bake the waffles for 6-8 minutes until crispy and golden, remove and place on a wire rack, or keep them crispy in a low oven.
- Repeat with the remaining batter.
- Serve the waffles stacked and topped with crispy bacon slices and drizzled with maple syrup.

Startier recipe

The following recipe is designed to get you started. You can find a wide range of possibilities for preparation and recipe ideas in books and on the internet.

American waffles with crispy bacon and maple syrup

- Serves 6
- These are made with store cupboard ingredients so you can whip up a batch of waffles in no time.
- Ingredients:
 - 250g plain flour
 - 2tsp sugar
 - 2.5tsp baking powder

- 1/2 tsp salt
- 350ml milk
- 85g melted butter
- 2 large eggs
- To serve:
 - Maple syrup
 - Instructions:

- In a large bowl mix together the dry ingredients.
- Combine the wet ingredients together and add this to the dry ingredients and beat until the batter is smooth. Leave to rest for 5 minutes.
- Spray the Waffle Maker with vegetable oil and heat the unit. Pour the batter into each recess and make sure the batter fills the moulds, do not overfill otherwise there will be overflow.
- Bake the waffles for 6-8 minutes until crispy and golden, remove and place on a wire rack, or keep them crispy in a low oven.
- Repeat with the remaining batter.
- Serve the waffles stacked and topped with crispy bacon slices and drizzled with maple syrup.

Maintenance and Cleaning

- There are no user serviceable parts inside the appliance.
- Always refer servicing to qualified service personnel.
- If you drop or damage your product, do not use until it has been inspected and approved by a qualified electrician.
- Never clean the appliance when it is turned on or is still hot.
- Turn off the appliance by unplugging it and wait until it has cooled down completely before cleaning it.