

Can I use my Philips OneBlade wet or dry?

Philips OneBlade can be used effectively on both wet and dry skin. It can be used with a shaving gel or foam and also in the shower.

Can my Philips groomer be rinsed under a tap?

Yes, you can rinse your Philips groomer under the tap.

Can I use my Philips OneBlade while it is connected to the power outlet?

If you are wondering whether you can use your Philips OneBlade while it is connected to the power outlet, find out your answer here.

Using Philips OneBlade corded

For safety reasons, the OneBlade is designed only to work cordless.

This is because the Philips OneBlade can be used for both wet and dry shaving. Using it with water while connected to electricity can be very dangerous. To avoid any risks, the appliance does not work while it is connected to a power outlet.

Also keep in mind that the adapter for OneBlade is not waterproof. Hence, while charging your OneBlade make sure you keep it and its adaptor away from water or any wet surface.



When should I replace the blades of my Philips OneBlade?

If you are wondering when should you replace the blades of your Philips OneBlade, find out your answer here.


Replacement indicator for OneBlade blades

Like any other blade, the blades of your OneBlade will become blunt over time, which can result in increased hair pulling and reduced cutting performance. Therefore, it is important to regularly replace these blades.

We recommend replacing the blades every **four months**. However, this can vary depending on usage and hair type. If you have very thick hair or if you use the OneBlade very frequently, the blades may need to be replaced earlier than four months. If you are a light user, then the blades can last much longer.

The OneBlade is equipped with a blade-wear indicator. This means that with use you will see a green patch develop on your blade. This patch is also indicated by arrows on the side. Once this patch is completely green, it is a signal for you to get a new blade.

To buy new blades for your Philips OneBlade visit our [website](#).

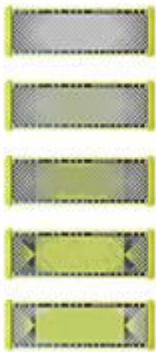

How do I know if my Philips OneBlade is fully charged?


If you are wondering how to find out if your Philips OneBlade is fully charged, find out your answer here.

Charging indications for Philips OneBlade

Some Philips OneBlade models have a charging indicator on the front of the device.

- When the OneBlade is running out of battery this indicator flashes orange.
- When the OneBlade is charging, the indicator flashes green.
- When the OneBlade is fully charged, the indicator lights up green continuously for approximately 30 minutes.

For other models, there is no indication of when the device is fully charged. However, when you plug it in, an orange light appears on the charger and stays on continuously while the charger is plugged in. To make sure these OneBlade models are completely charged, always charge them for at least 8 hours. Charging the OneBlade for longer periods of time does not damage its battery or machinery.

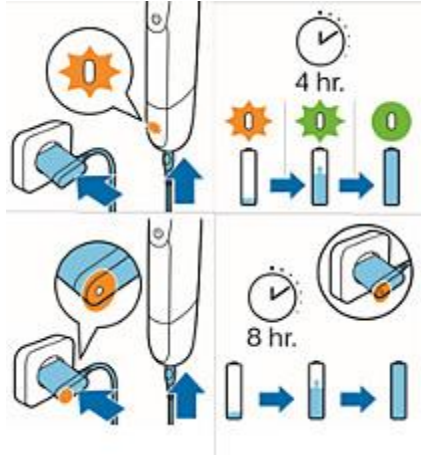

Charging indicators for OneBlade Pro

Based on the model of Philips OneBlade Pro you have, there can be two kinds of charging indications that you see. You can check the model number of your OneBlade printed on its backside.

QP6520 models

These models come with a digital display on the front of the device. When the battery is running out, the charging symbol blinks orange, and the remaining battery power is displayed on the device.

Once the battery is fully charged, the battery status percentage shows 100% and the charging symbol lights up continuously.


QP6510 models

These models show a battery status indicator bar on the front of the device.

- When the OneBlade Pro is running out of battery the status indicator flashes orange.
- When the OneBlade Pro is charging the first bar of the indicator flashes white and then lights up white continuously. Then the second bar flashes and and so on until the appliance is fully charged.

The indicator lights switch off automatically approximately 30 minutes after the OneBlade is fully charged.

If you have any further charging related questions, please refer to your user manual or contact us.

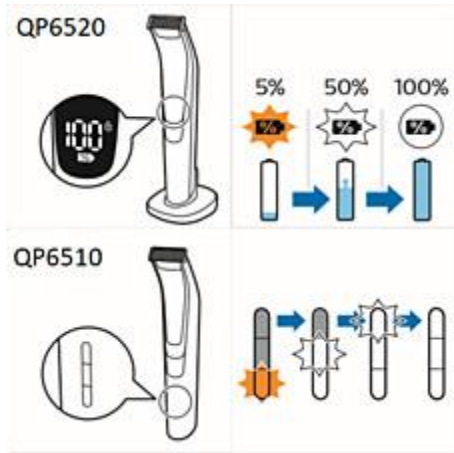

How do I clean my Philips OneBlade?

Cleaning and maintaining your Philips OneBlade is easy. To clean your Philips OneBlade follow our simple instructions below.

Cleaning instructions for Philips OneBlade

- After each use blow off any hair accumulated on your OneBlade.
- Turn on your OneBlade and rinse it with some lukewarm water.
- If the attachments need further cleaning, turn your OneBlade off, take off the attachments and wash them separately.
- Allow the attachments to air dry. Do not dry the blade with a towel or tissue; and do not tap it against the sink or a hard surface, as these actions can damage your blade.

For more details on how to use, clean and maintain your Philips OneBlade please refer to your digital user manual or contact us.



How do I trim my beard with my Philips OneBlade?

The Philips OneBlade can be used to shave, trim and edge up your beard. Follow the instructions below on how to trim your beard with your OneBlade. Before trimming your beard ensure that your skin and facial hair are dry.

Trimming instructions for Philips OneBlade

Your Philips OneBlade comes with different trimming combs, which allow you to trim your beard to different lengths.

- 1) Place the comb onto the blade, with the teeth of the comb pointing upwards.
- 2) Switch on your Oneblade and place it on your skin.
- 3) Make sure the trimming comb is in full contact with your skin to obtain an even trimming result. Start trimming your hair in the direction of the teeth of the comb and move against the grain for the best results.
- 4) Once you are done switch off the OneBlade and remove the comb by holding it from its edges and pulling it off. Remember to clean the appliance after each use.

Note: The quantity and types of trimming combs may vary per OneBlade model. For specific instructions always check your digital user manual or contact us.



Trimming instructions for Philips OneBlade Pro

The OneBlade Pro comes with a precision trimming comb, which allows you to trim your hair to different lengths.

- 1) Attach the comb to the blade until you hear a click.
- 2) Turn the hair length setting wheel to select your desired hair length setting. These settings are in millimetres.
- 3) Switch your OneBlade Pro on and place it on your skin. Now start trimming your facial hair by moving the blade against the grain.
- 4) Once you are done, switch your OneBlade Pro off. You can now remove the comb by first pulling its back part off the body and then sliding it off. Remember to clean the attachments and device after each use.

