

User's Manual  
Manual du Propriétaire  
Manual de Usuario


**We R Memory Keepers® Ribbon Cutter / Coupeuse et  
Scelleuse de Ruban / Cortador y Sellador de Cintas**

Before operating the appliance, please read these instructions carefully and keep them for future reference.

Avant de faire fonctionner l'appareil, veuillez lire ces instructions soigneusement. Veuillez les conserver pour de futures références.

Antes de operar el artefacto, lea estas instrucciones atentamente y guárdelas para consultarlas en el futuro.

**BATTERY COVER**  
**COUVERCLE DE BATTERIE**  
**TAPA DE LAS PILAS**

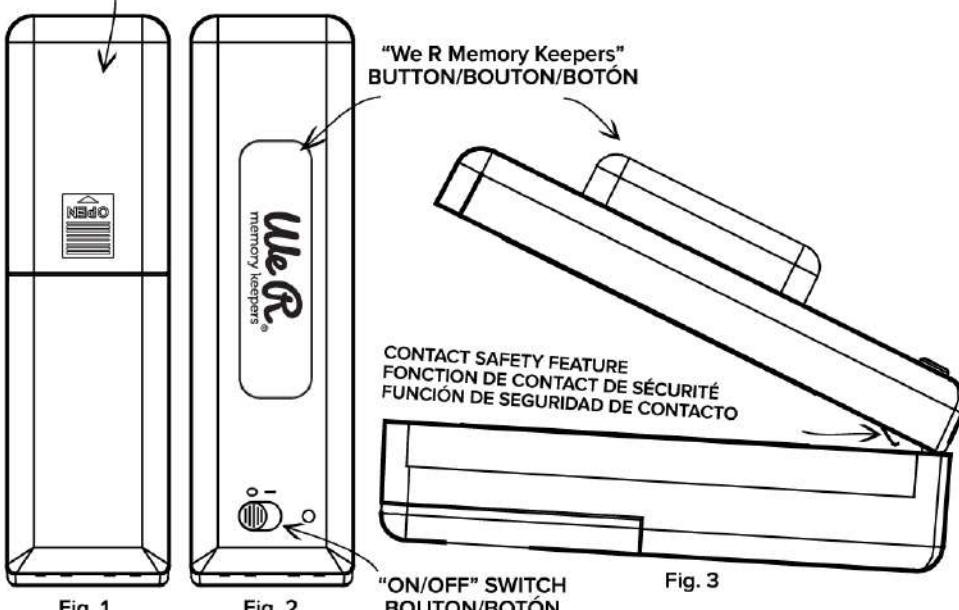

**AMERICAN CRAFTS®**  
588 W. 400 S. STE 300  
LINDON, UT 84042  
[www.wermemorykeepers.com](http://www.wermemorykeepers.com)

**DESCRIPTION**


1. PRODUCT: We R Memory Keepers® Battery Ribbon Cutter/Sealer
2. ELECTRICAL RATING: 6V-7W

**IMPORTANT SAFETY INSTRUCTIONS — READ ALL INSTRUCTIONS BEFORE USING**

**WARNING: Hot elements!** The ribbon cutter has a heating element that can cause burns. This is not a toy and is not intended for use by children 12 years of age or younger. **WARNING: To heat, the ribbon cutter must be closed.** This safety feature is to protect from burns (Fig. 3). Never deactivate the safety feature (will void warranty), or use if tool has been damaged or dropped. **WARNING: Objects that have touched the heated element of the tool may cause burns.** Always wait for ribbon to cool before handling. **WARNING: The heating element may smoke and, at high temperatures, some material may give off toxic fumes.** Always use in a well-ventilated area. Always remove ribbon when not in use. See below for cleaning instructions if residue builds up on the heating element.

**Safety Instructions:**

1. Work environment should be clean, well-ventilated, dry, well-lit and clear of flammable materials.
2. Do not use the ribbon cutter tool near water or expose the tool to rain or moisture.
3. Keep away from children and store locked up when not in use.
4. When not in use, slide the switch to the "OFF" position, and remove ribbon.
5. Remove batteries when not in use.
6. For use with ribbons only.
7. Save these instructions for future reference.

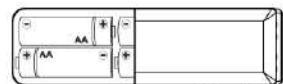

(Fig. 4)

**Battery Instructions:**

1. Set switch to the "Off" position and open battery compartment by sliding the "OPEN" button in the direction of the arrow (Fig. 1).
2. Insert 4 fresh AA (1.5V) high quality alkaline batteries or 4 fully charged AA high quality rechargeable batteries following the polarity diagram as shown (Fig. 4).

Note: Do not mix old and new batteries. Do not mix alkaline with rechargeable batteries.

**Directions for Use:**

1. Slide the On/Off switch to the "On" position (Fig 2).
2. Place ribbon in the desired position for cutting (folding in half for the V-shaped cut).
3. Close the ribbon cutter for 2 seconds to activate the heating element, then press the "We R Memory Keepers" button (Fig. 2) down once firmly and release quickly. For folded or thicker ribbon, press 2 or more times in the same way. Do not press and hold. This can cause excessive melting. Always test a sample of your ribbon, as all ribbons are different.
4. Wait for ribbon to cool, then remove. Slide the switch to the "Off" position to conserve batteries.
5. At times the ribbon cutter may smoke due to ribbon residue. To clean the ribbon cutter, turn the tool on and leave closed for two minutes. Once residue is burned off and wire is cool, wipe with a soft cloth.
6. For clean cuts, always use fresh batteries.

**Warranty:**

This product is warranted to be free of manufacturer's defect in workmanship and materials for 30 days from date of purchase. This warranty does not cover any damage resulting from accident or misuse. If the product becomes defective within the 30-day warranty period, we will repair or elect to replace it. Please send defective tool, with proof of purchase, to the address on the front.

