

USER GUIDE

Compatible products

Color Inkjet Printers

- HP Deskjet 1000 Printer (CH340B)
- HP Deskjet 3000 Printer (CH393B)
- HP Deskjet 1010 Printer (CX015B)

Inkjet All-in-One Printers

- HP ENVY 5530 e-All-in-One Printer (A9J40B)
- HP ENVY 4500 e-All-in-One Printer (A9T80B)
- HP ENVY 4504 e-All-in-One Printer (A9T88B)
- HP Deskjet 2540 All-in-One Printer (A9U22B)
- HP Deskjet 2542 All-in-One Printer (A9U28B)
- HP Deskjet 3055A e-All-in-One Printer (B0N11B)
- HP Deskjet 3057A e-All-in-One Printer (B0N12B)
- HP Deskjet 3059A e-All-in-One Printer (B0N13B)
- HP Deskjet 1510 All-in-One Printer (B2L56B)
- HP Officejet 4630 e-All-in-One Printer (B4L03B)
- HP Officejet 4632 e-All-in-One Printer (B4L06B)
- HP Deskjet 1512 All-in-One Printer (C5X26B)
- HP Deskjet 1514 All-in-One Printer (C5X27B)
- HP Deskjet 1050 All-in-One Printer (CH346B)
- HP Deskjet 2050 All-in-One Printer (CH350B)
- HP Deskjet 2050 Special Edition All-in-One Printer (CH355B)
- HP Deskjet 3050 All-in-One Printer (CH376B)
- HP Deskjet 1050A All-in-One Printer (CQ198B)
- HP Deskjet 2050A All-in-One Printer (CQ199B)
- HP Deskjet 2054A All-in-One Printer (CQ200B)
- HP Deskjet 3050A e-All-in-One Printer (CR231B)
- HP Deskjet 3054A e-All-in-One Printer (CR235B)
- HP Deskjet 3052A e-All-in-One Printer (CR236B)
- HP Deskjet 2510 All-in-One Printer (CX027B)
- HP Deskjet 2514 All-in-One Printer (CX031B)
- HP Deskjet 2512 All-in-One Printer (CX032B)
- HP Deskjet 2544 All-in-One Printer (D3A78B)
- HP Officejet 2620 All-in-One Printer (D4H21B)
- HP Officejet 2622 All-in-One Printer (D4H28B)
- HP Officejet 2624 All-in-One Printer (D4H29B)
- HP Officejet 4634 e-All-in-One Printer (D4J78B)
- HP ENVY 5534 e-All-in-One Printer (D4J85B)
- HP ENVY 5536 e-All-in-One Printer (D4J86B)
- HP Deskjet 2549 All-in-One Printer (E1E94B)
- HP ENVY 4507 e-All-in-One Printer (E6G70B)
- HP ENVY 4503 e-All-in-One Printer (E6G71B)
- HP ENVY 4508 e-All-in-One Printer (E6G72B)
- HP Officejet 4636 e-All-in-One Printer (E6G86B)
- HP Deskjet 2547 All-in-One Printer (J7V17B)
- HP Deskjet 2543 All-in-One Printer (J7V18B)
- HP Deskjet 2548 All-in-One Printer (J7V19B)

- HP DeskJet 2545 All-in-One Printer (K9B57B)

Replace the toner cartridge

When a toner cartridge approaches the end of useful life, you are prompted to order a replacement. You can continue printing with the current cartridge until redistributing the toner no longer yields acceptable print quality.

1. Rotate the cartridges to access the cartridge that needs replacement.
 - LCD Control panel: Press the Rotate Cartridges button to access the cartridge that needs replacement. The control panel indicates the cartridge that is accessible in the rotation.
 - Touchscreen control panel: Touch the Supply icon for the cartridge that needs replacement. The cartridges rotate to the cartridge you select.OK
2. Lift the scanner assembly.
3. Open the the top cover.
4. Remove the empty toner cartridge.
5. Remove the new toner cartridge from the bag. Place the used toner cartridge in the bag for recycling.
6. Grasp both sides of the toner cartridge and distribute the toner by gently rocking the cartridge.
7. Grasp the toner cartridge by the center handle, and then pull the protective plastic shield straight off the cartridge.

CAUTION:

Do not touch the shutter or the surface of the roller.

8. Bend the tab on the left side of the cartridge until the tab breaks loose. Pull the tab until all the tape is removed from the cartridge. Place the tab and tape in the toner cartridge box to return for recycling.
9. Align the toner cartridge with the tracks inside the product, and then insert the toner cartridge until it is firmly seated.

NOTE: Compare the color label on the toner cartridge to the color label in the carousel slot to make sure the toner cartridge color matches the carousel position.

10. Close the top cover.
11. Rotate to the next cartridge that needs replacement.
 - LCD Control panel: Press the Rotate Cartridges button to move to the next X

If above steps do not work:

1. **Open the cover of the product and remove the print cartridges**
2. **Close the cover and wait for the Insert Ink Cartridges message to display**
3. **Disconnect the power cord from the back of the product and wait for one minute**
4. **Reconnect the power cord. If the product does not automatically turn on, press the Power button**
5. **Open the cover and reinsert the print cartridges**
6. **Close the cover. If prompted, print a calibration page.**
7. **Reconnect the USB cable, and try to print a print job from the computer**