

Mr. Christmas®

WORLD'S FAIR GRAND FERRIS WHEEL

THIS PRODUCT IS NOT A TOY! Please read this entire instruction booklet before using.

INSTRUCTION MANUAL

1. DESCRIPTION

Thank you for purchasing the **WORLD'S FAIR GRAND FERRIS WHEEL**. The product features 20 gondolas traveling around an LED-lit Ferris Wheel accompanied by music. Plays 25 year-round songs and 25 Christmas carols. The gift box includes the unit and an adapter. This product is not a toy and is not intended for use by children. For indoor and decorative use only.

2. OPERATION

- A. Gently lift the unit from the packaging. **DO NOT LIFT THE UNIT BY HOLDING ANY ATTACHED FIGURES OR PARTS.**
- B. Place the unit on any flat surface.
- C. Insert the adapter plug into the unit jack at the rear of the unit. Plug the adapter into a nearby working outlet. The adapter is intended to be correctly oriented in a vertical or floor mount position.
- D. Slide the switch from OFF to ON to turn on the unit.
- E. Turn the VOLUME dial to adjust the volume of the music. NOTE: When the volume dial is at its minimum setting, no music can be heard.
- F. Use the CHRISTMAS CAROLS / YEAR-ROUND SONGS switch to select the type of music you wish to hear.
- G. The first song is selected randomly each time the unit is turned on. To switch to a new song immediately, either push the PUSH FOR NEW SONG button or turn the unit OFF then ON again.
- H. Push the switch to either STEADY or LIGHT to select the light effect. The lights remain steady on in the STEADY option and flash in a light show on the LIGHT option.



3. CARE AND MAINTENANCE INSTRUCTIONS

- A. Do not expose this item to moisture or outdoors. This item is for indoor use only.
- B. Before using or reusing, inspect product carefully. Discard any products that have cracks in enclosure or exposed wire.
- C. When storing the product, carefully remove from the current location to avoid any undue strain or stress on the conductors, connections and wires.
- D. When not in use, store neatly in a cool, dry location protected from sunlight and heat.
- E. If necessary, clean product by wiping with a soft, dry cloth.

4. TROUBLESHOOTING

This item has been designed to provide many seasons of trouble-free operation. In the event that a problem does occur, please refer to the following chart for suggested solutions.

Problem	Likely Causes	Solution
No music or motion	1. No power	1. Make sure the adapter is plugged into a working outlet 2. Make sure the adapter jack is securely attached to the back of the unit
	2. Unit is OFF	Turn the unit ON
Music is not playing but there is motion	1. Pause between songs	Wait one or two seconds for the next song to start
	2. VOLUME dial is LOW	Turn VOLUME control clockwise toward HI position

Mr. Christmas®

Problem	Likely Causes	Solution
Music is playing but there is no motion	Power is interrupted	Turn power OFF and then ON again
Music is too loud, too soft, or not audible	Volume dial is incorrectly adjusted	Adjust VOLUME dial to your preference
Lights do not flash	Item is in STEADY light mode	Switch to LIGHT mode

5. SAFETY INSTRUCTIONS AND WARNINGS

WARNING: THIS IS NOT A TOY! THIS PRODUCT CONTAINS SMALL PARTS WHICH COULD CAUSE CHOKING IF SWALLOWED.
TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS ITEM TO RAIN OR MOISTURE. DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. IF SERVICING IS NEEDED, SEND TO QUALIFIED SERVICE PERSONNEL. PLEASE ADHERE TO THE FOLLOWING:

- A. Read Instructions** - Safety and operating instructions should be read before the item is operated. Please adhere to the instructions and warnings for your safety.
- B. Water and Moisture** - Do NOT put item near water of any kind: a bathtub, washbowl, kitchen sink, on a wet floor or near a swimming pool.
- C. Heat** - The item should be situated away from heat sources such as radiators, hairdryers, heat registers, stoves or other appliances that produce heat.
- D. Power Sources** - The item should be connected to a power supply only like that supplied with the unit.
- E. Damage Requiring Service** - Have a qualified service personnel service this item when:
 - 1) The power-supply cord or plug has been damaged.
 - 2) Objects have fallen or liquid has spilled into the item.
 - 3) The item has been exposed to rain or moisture.
 - 4) All troubleshooting techniques have been tried and the item will not work or has stopped working.
 - 5) The item has been dropped or the enclosure damaged.

FEDERAL COMMUNICATIONS COMMISSION CODE, PART 15

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- (a) Reorient or relocate the receiving antenna
- (b) Increase the separation between the equipment and the receiver
- (c) Connect the equipment to an outlet on a circuit different from that to which the receiver is connected
- (d) Consult the dealer or an experienced radio / TV technician for help

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The following is only applicable to customers in the USA:

For more information about this product, please call 1-800-467-9627, or visit our website www.mrchristmas.com. We will be happy to help you!

6. NINETY-DAY LIMITED WARRANTY

Mr. Christmas warrants the original consumer / purchaser of the **WORLD'S FAIR GRAND FERRIS WHEEL** that it will be free from defects in material and workmanship for a period of ninety (90) days from date-of-purchase. Any liability of Mr. Christmas under this warranty shall be limited to the repair or replacement of defective parts without charge if the item is returned with shipping charges prepaid together with proof of date-of-purchase, name and mailing address of the original consumer/purchaser. This warranty does not cover defects caused by damages in transit, abuse, accident, negligence or repairs made by others. This warranty gives the consumer / purchaser specific legal rights. This consumer / purchaser may also have other rights, which vary from state to state.

ACTUAL PRODUCT MAY VARY SLIGHTLY FROM PHOTOGRAPHS / DRAWINGS / DETAILS IN THE INSTRUCTION MANUAL