

Alexa Link Guide


1. Bind a device.

Purchase a device that supports Alexa and add it to the device list on the home page. You're recommended to give the device an easily recognizable name, such as "Front Door".

Note: Models work with Alexa: CP3, CT3, and CH3. More models will come soon.

2. Enable the "Tenda Smart" skill.

Search for "Tenda Smart" in the Alexa app's skills and tap "ENABLE TO USE".

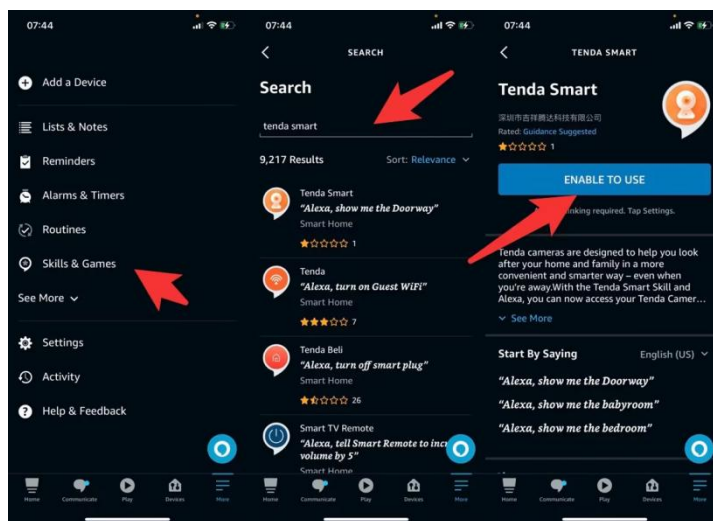

3. Link an account.

Enter the account name and password of the "TDSEE" App to link "Tenda Smart" with "Alexa".

4. Control the device with voice commands.

After linking, you can use voice commands to control the device bound to the "TDSEE" App, such as:

Alexa, show the front door camera.

Alexa, hide the front door camera.

5. Unbind your device

Open the Amazon Alexa app and tap More > Skills&Games > Your Skills. Find "Tenda Smart" and select "DISABLE SKILL".

6 Note

When using an Android phone for account linking, you are recommended to select "Open with TDSEE" App. Opening with browser may cause linking failures or exceptions due to Android browser compatibility issues.