


La Réveuse

LARB2205S2/LARB2205K2

Safety Information

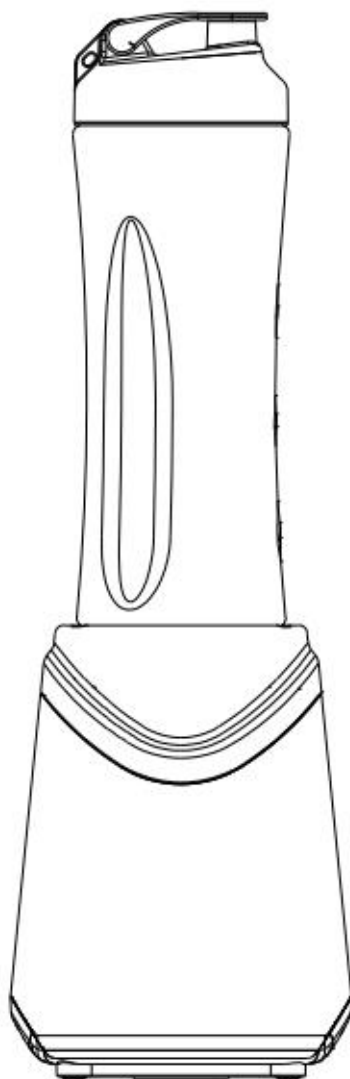

Multi-function blender

–FOR HOUSEHOLD USE ONLY –

INFORMATION TO KEEP FOR LATER CONSULTATION, TO READ CAREFULLY BEFORE USING THE APPLIANCE**WARNINGS**

- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children must not use the appliance as a toy.
- This appliance must not be used by children. Keep the appliance and its cable out of the reach of children.
- Cleaning and maintenance by the user must not be carried out by children.
- Care shall be taken when handling the sharp cutting blades, emptying the cup and during cleaning.
- Always disconnect the appliance from the power source if you leave it without supervision and before assembly, dismantling or cleaning
- Turn the appliance off and disconnect it from the power source after each use and before putting it in place or changing the accessories or approaching parts that are mobile during operating.
- When assembling, dismantling or cleaning, it is advisable to handle the accessories carefully; some (e.g. cones, endless screws) include sharp parts. Risk of injury.
- This appliance is exclusively intended for a domestic use and as described in these instructions.
- Do not use the appliance for purposes other than those for which it was designed.
- The maximum duration of continuous operating is 1 minute.
- Wash/clean the appliance and its accessories scrupulously following the instructions given below.
- Do not operate any appliance with damaged cord or plug, or after appliance has been dropped or damaged in any way. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- If the appliance's power cord is damaged, it must be replaced by the manufacturer, its after-sales service or a person of similar qualification to avoid any danger.
- The unauthorized use may cause fire, electrical shock or damage to your machine.
- To protect against the risk of electrical shock, do not put cord, plug, base, or motor in water or other liquid.

GENERAL PRECAUTIONS

- It is advisable to be vigilant when the appliance is in operation near children.
- Do not move the appliance when it is operating.
- Do not use accessories other than those provided.
- Always wait for the complete stop of the mobile parts before removing any accessory.
- Do not put your hands or a kitchen utensil in the filler tube when the appliance is in operation.
- The maximum time for continuously using the appliance is 1 minute. The use of the appliance above this time could reduce its lifespan and/or damage it irreversibly. If however the preparation of the food requires a longer operating time than 1 minute, it is advisable to wait 30 minutes after each use of 1 minute before operating the appliance again.
- Clean the appliance and the accessories after each use.
- Indoor use only, do not expose to rain, snow or other bad environments