



IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL
INSTRUCTIONS
BEFORE USING.**

KEEP AWAY FROM

WATER DANGER —

To reduce the risk of electrocution:

1. Always unplug it immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquid.

5. If an appliance falls into water, unplug it immediately. Do not reach into the water.


WARNING —

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. This appliance should not be used by, on or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by Conair.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service centre for examination and repair.
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed, couch, or towel, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord with this appliance.

- 11. Do not touch “metal radiator strips” that hold rollers, as they will be hot.**

to long hair to create a looser curl, that's bouncy and full of body.

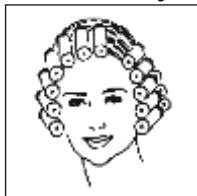

JUMBO ROLLERS 1.25"- Use on medium to long hair to create the smooth sleek lines of softer, sophisticated hairstyles.



Rollers come packed three of the same size to a carton. Rollers are sold by the carton only.

RP96-INF	3 Medium Rollers	\$4.75
RP97-INF	3 Large Rollers	\$5.25
RP98-INF	3 Jumbo Rollers	\$5.75
SMC10-B	Replacement Clips	\$5.99

Please add postage and handling of \$3.75 to all orders.

MAIL ORDER TO:

Conair Consumer Products Inc.

100 Conair Parkway
Woodbridge, Ontario L4H 0L2

Include return name and address and model number of replacement rollers. Please make cheque payable to Consumer Products Inc.

HOW TO OPERATE YOUR HAIRSETTER:

1. Your hairsetter is uniquely designed with a retractable cord for easy storage. Place hairsetter on a firm, flat surface. Gently pull the cord from the base of the hairsetter. With the lid closed, plug cord into standard electrical outlet.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

2. Once plugged in, turn the unit on by sliding the switch to the on position. The red light will go on, the rollers will heat up quickly and the ionic energy will be automatically activated (please refer to HOW TO CURL YOUR HAIR for further instruction).

Use the control dial to choose the desired temperature for your hair

type. 12 variable heat settings give you greater versatility.

3. Allow rollers to heat with lid closed, as this will provide the fastest, most efficient heat-up. Once the rollers reach your desired temperature, you can begin setting your hair. Allow rollers to heat longer at a higher temperature, for tighter curls. Never leave your hairsetter on and unattended. Always unplug the hairsetter when not in use. Allow the hairsetter to cool down after use, and store in a safe place.

4. Hair should be clean and dry or slightly damp – never wet – when setting.

5. This appliance has about a 60-minute auto off function. If the appliance is left unused for 60 minutes it will automatically shut off

USER MAINTENANCE

Your hairsetter is designed for household use and is virtually maintenance-free. This product represents the highest standards of workmanship and engineering research.


If cleaning becomes necessary, disconnect the appliance from the power source. Allow the setter to cool. Clean the unit and the metal radiator strips with a cloth. (Occasionally you may want to clean your rollers. Use a damp cloth and mild detergent or soap.) If any abnormal condition occurs, unplug the hairsetter, allow it to cool, and return it to an authorized service representative for repair.

STORAGE

Allow hairsetter to cool. Pull gently on the plug and the retractable cord will coil inside the hairsetter (Fig. 1).


Handle cord carefully to extend its life; avoid jerking or straining plug connections. Place hairsetter out of reach of children, in a safe, dry location.

 Fig. 1

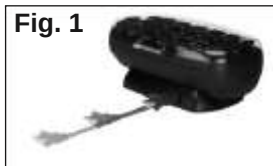

**WARNING: IF YOU THINK
THE POWER IS OFF WHEN
THE SWITCH IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

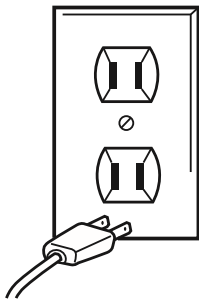

Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically live even if the switch is off? If the plug

is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED FIVE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below together with your purchase receipt and \$3.75 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES,
OBLIGATIONS,
OR LIABILITIES, INCLUDING BUT
NOT LIMITED TO THE IMPLIED
WARRANTY OF MERCHANTABILITY
AND FITNESS FOR A PARTICULAR
PURPOSE, SHALL BE LIMITED IN
DURATION TO THE 60 MONTH
DURATION OF THIS WRITTEN,
LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE
LIABLE

FOR ANY SPECIAL, INCIDENTAL,
OR CONSEQUENTIAL DAMAGES
FOR BREACH OF THIS OR ANY
OTHER WARRANTY, EXPRESS OR
IMPLIED, WHATSOEVER.

This warranty gives you specific
legal rights, and you may also have
other rights, which vary from
province to province.

HOW TO CURL YOUR HAIR 1.



Place ends of hair on roller and wind toward the scalp. Roll up hair firmly, and secure clip, crossing over roller. Do not

place clip in roller slit.

2. The firmness of the curl is regulated by the temperature control dial, the diameter of the roller, and the length of time the roller is left in your hair.

3. For tight, firm curls, use smaller rollers and higher temperature and leave in the hair for at least ten minutes before removing.



For soft, wavy curls, use larger rollers and lower temperature and remove rollers



after a shorter period of time. Our 12 variable heat settings gives you longer lasting styles. 4. Removing roller: hold roller in one hand while removing clips with the other. Gently drop roller (do not pull) and let curl bounce back after roller has been completely removed. Let cool for one minute for a firmly set curl, and then style your hair into a look that lasts for hours.

IMPORTANT: After using the hairsetter several times, you will find the best roller selection, and the best timing for the texture of your hair and for the result you desire.


DUAL IONIC PORT SYSTEM GENERATES NEGATIVE IONS THAT CAN:

- neutralize positive charge on flyaway, frizzy hair
- eliminate static electricity
- contribute to shine

TOURMALINE CERAMIC™ TECHNOLOGY

combines the powerful properties of natural tourmaline crystals with ceramic heat technology to eliminate frizz and damaging hot spots. Gently styles hair to a healthy, silky, shiny finish.

**Soft
Flocking
Layer**

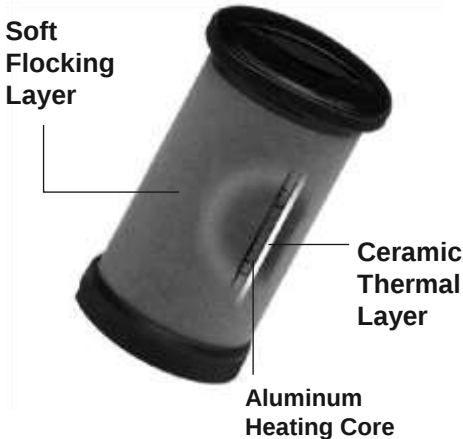

**Ceramic
Thermal
Layer**

**Aluminum
Heating Core**

