
Limited Warranty and Service

Limited Warranty

- This warranty card is included with the Digital Paper device. Please keep it for future reference.
- Please check the coverage period of the warranty card.

Service

Check the Digital Paper device itself first should a problem occur

See "Troubleshooting" (page 60).

In the event you cannot recover the Digital Paper device

Consult the Sony Support Center. Please provide the below information.

- Model name (Description on the back panel)
- Serial number (Description in the microSD card slot cover)
- Purchase date

Warranty repair period

Sony will repair the Digital Paper device based on stipulations of the warranty card. This device contains consumable parts - even if the warranty is still valid, repair service may be subject to fees for replacing such parts. Refer to the warranty card for details.

Please refer to the PC support site for additional details.

<http://www.sony.com/digitalpapersupport>

Manufacturers' warranties may not apply in all cases, depending on factors such as use of the product, where the product was purchased, or who you purchased the product from. Please review the warranty carefully, and contact the manufacturer if you have any questions.