


1. Please ensure the RT100 is connected in wired mode (with cable), the mode switch is set to USB, and Win/Mac is correctly chosen.
2. Download the [Driver](#), install it. Then, right-click and **run the driver as administrator**.
 - a) **If the Driver is in Chinese**, you can change the language here: ①→②→Choose English. (Please select English or Chinese, and not auto)

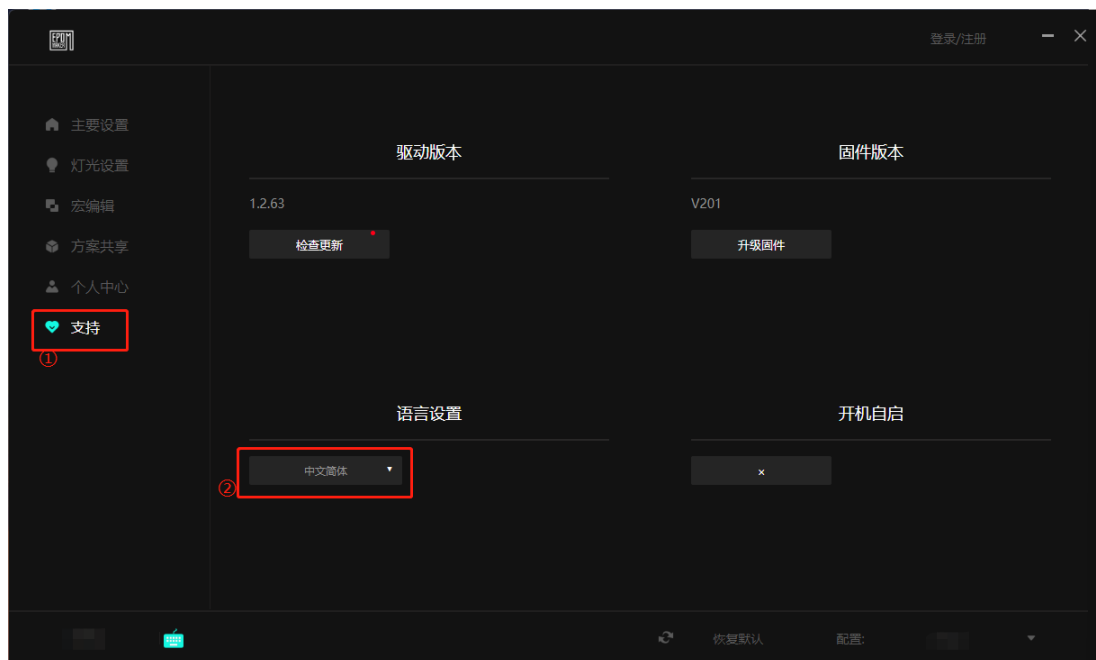


b)

c) **If the mini-display display abnormally**, (such as showing incorrect information, fuzzy image, or stuck on the wrong language),

- i. Push the mini display into the keyboard firmly or adjust the angles a bit until connection is proper.
- ii. In the EPOMAKER Driver, updating the firmware at Support > Firmware > Upgrade.
- iii. Please make sure the RT100 is the **only** keyboard connected to the computer during the firmware upgrading.
- iv. The latest firmware version is V504-OledV505.


3. **How to sync time** (Screenshot credit: <https://www.youtube.com/watch?v=XJ9-drqI9tc>)

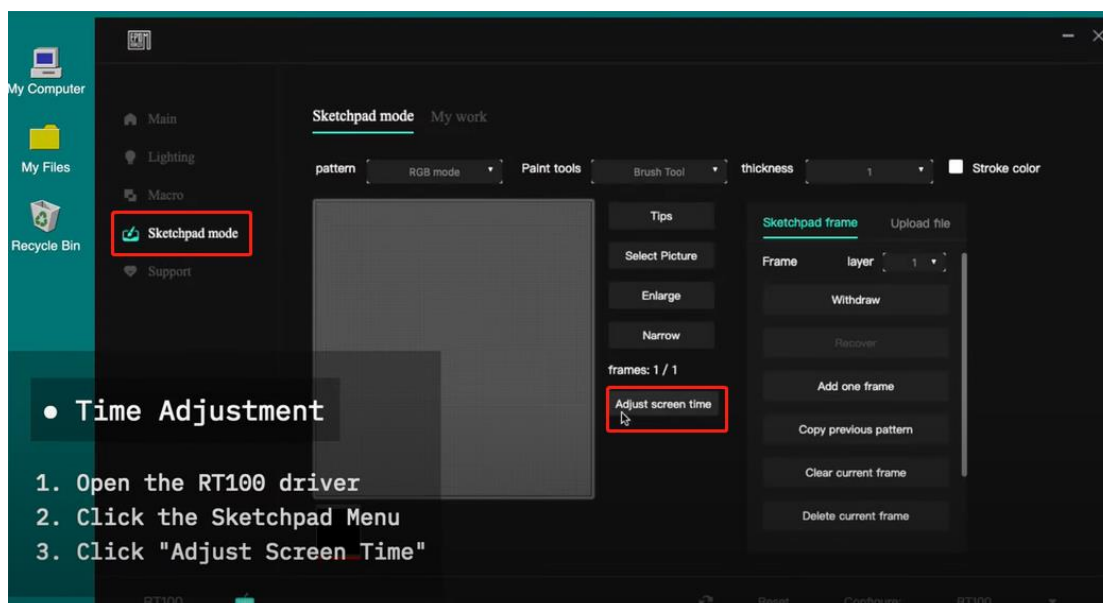

a)

4. **How to sync CPU** (Screenshot credit: <https://www.youtube.com/watch?v=XJ9-drqI9tc>)


- a) Make sure to run the driver as administrator.

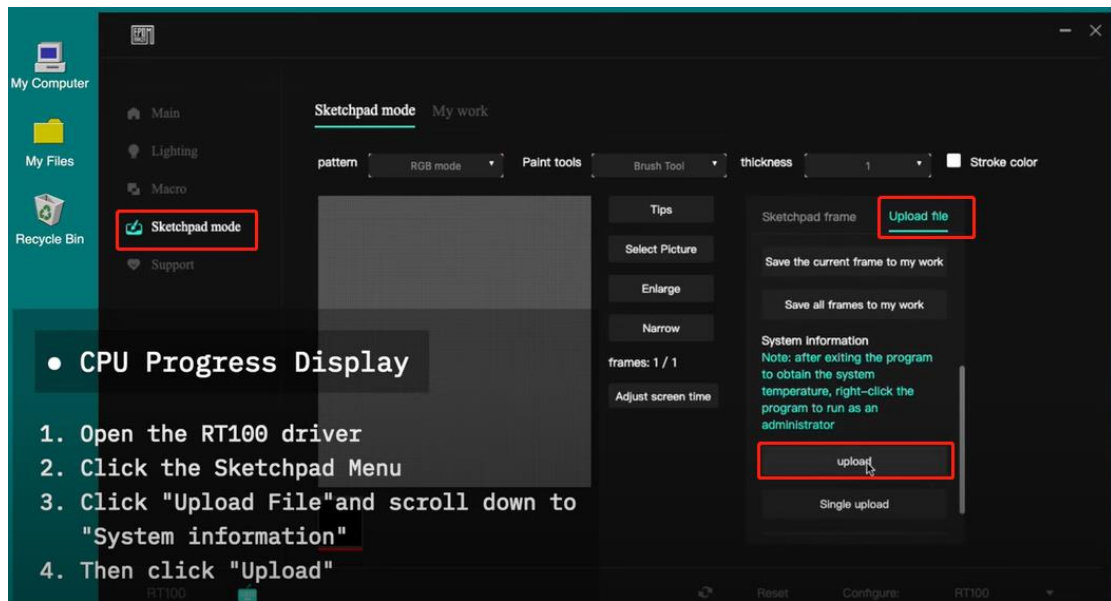

b)

5. **How to sync TEMP**

- a) *Tips: this feature is only available on EPOMAKER_setup_1.2.69(WIN20230609) or higher version. You can contact our support team for the latest version if it is not available at [Epomaker Download Page](#).*
- b) Make sure to run the driver as administrator and you are logged in.
- c) Sketchpad Mode > Upload file > Input the name of your city in English or Chinese (please kindly use the same language as the language setting of the software)
- d) Click Send

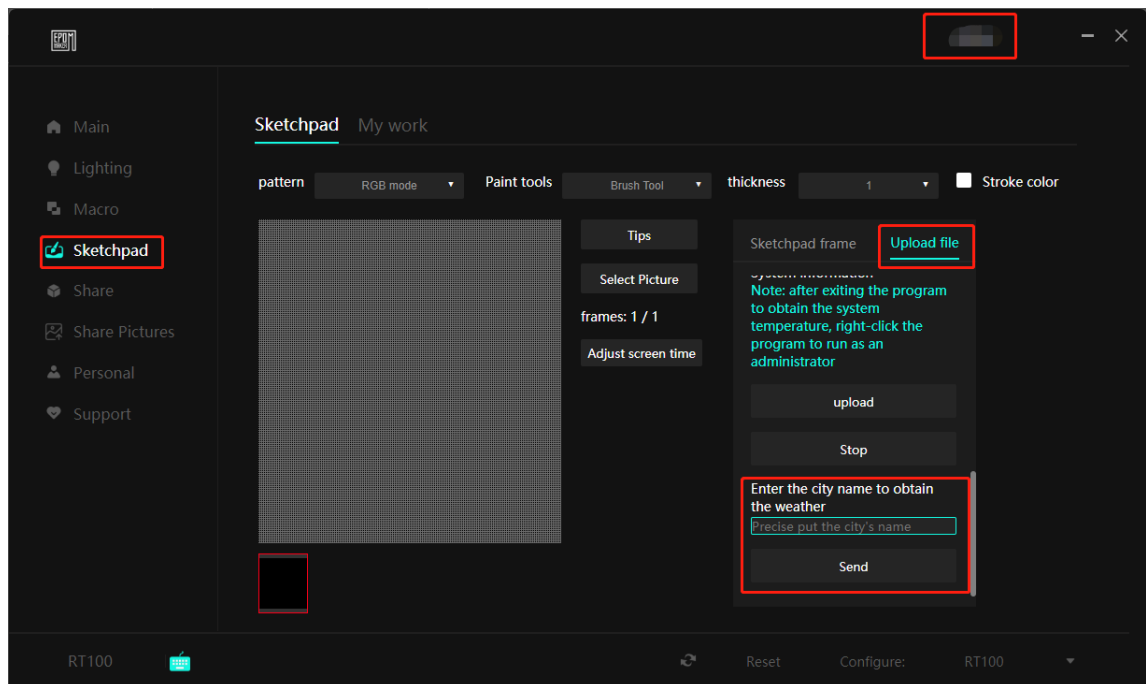

e)


6. **How to customize the gif/photo on the mini TV.**

- a) Sketchpad Menu > Select Picture, select a gif, and upload it;

- b) Then, go to Sketchpad Menu > Upload file, click once on preview to check if the gif looks proper. After that, click on "upload gif". Wait until the progress bar gets 100%, and the upload should be successful.
- c) *Please do not use the RT100 or the computer while gif is uploading and wait until the progress bar gets 100%.*
- d) For a detailed demonstration, click [here](#) to watch the video on our YouTube channel starting at 0:38.

7. Firmware

- a) If keyboard is in wired mode and screen is plugged, the latest firmware version of your RT100 should be V504_OLEDV505

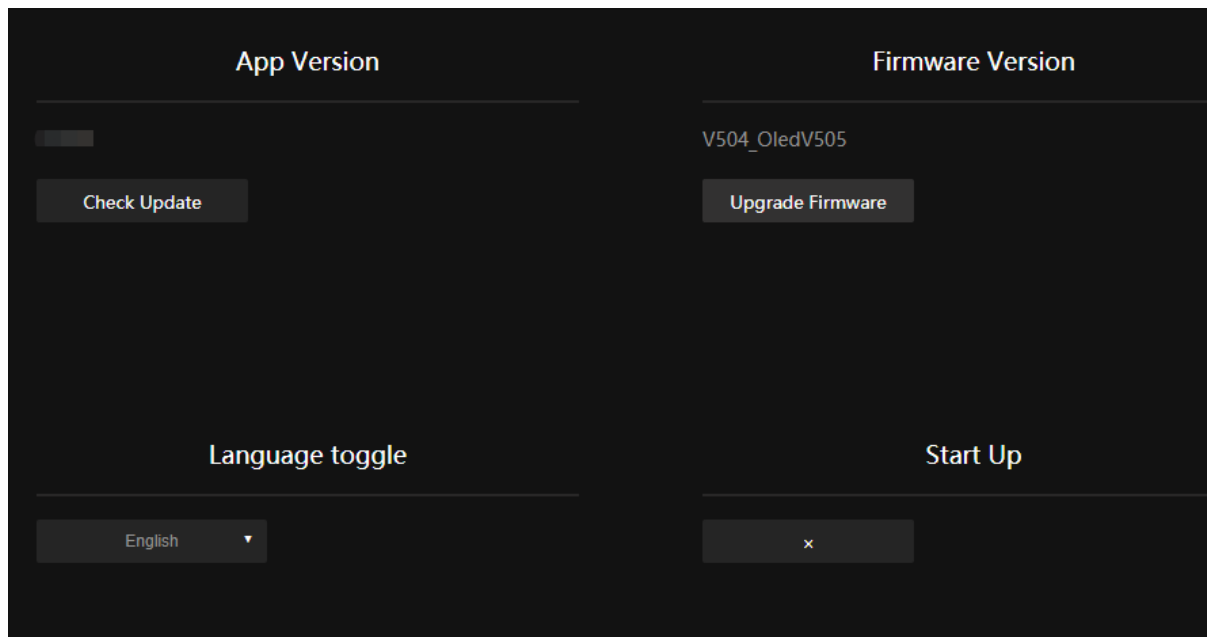

b)