

5.5L MULTIFUNCTIONAL SLOW COOKER

(HZ1-DG620-HSMG4)

Function operation instructions 1-1

1. OVERVIEW OF FUNCTIONS



Figure 1: Full display of panel and digital tube

- With "HIGH, LOW, SAUTE, STEAM, WHITE RICE, WARM, DELAY" Functions.
- It has self-test, power-down memory and fault protection functions.

2. FUNCTION KEY OPERATION

- After powering on, the buzzer sounds once, the digital tube and all LED indicators light up for 1 second, and then enters the activation state.
- ① Activation state: All LED indicators are off, and the digital tube displays "- - - -". If there is no key operation within 15 seconds of activation, it will enter standby mode.
- ② Standby state: All LED indicators and digital tubes are off. Touch any button or turn the knob in the standby state to enter the active state;
- Unless otherwise specified, the buzzer will sound once for all valid keys (0.2 seconds by default). After all cooking functions are completed, the buzzer will sound 3 times.

3、 “” STEPLESS KNOB (FUNCTION SELECTION AND TIME SETTING)

① Function selection:

When activated, rotate clockwise or counterclockwise “” Stepless knob, can cycle through the selection of functions“HIGH⇔LOW⇔SAUTE⇔STEAM⇔WHITE RICE”, The selected function indicator light flashes, and the digital tube steadily displays the corresponding default time (see Table 1 for details).

Table 1: List of cooking times

cooking function	HIGH	LOW	SAUTE	STEAM(蒸煮)
Default time	08: 00	06: 00	00: 15	00: 20
time limit	6~14H	2~8H	5~60minute	5~60minute
step	10minute	10minute	5minute	5minute
Remark	The digital screen directly displays the time countdown while working	The digital screen directly displays the time countdown while working	work display box  Swim clockwise, and when the temperature reaches the expected value, the time countdown will be displayed (at the same time, there will be 3 beeps)	work display box  Swim clockwise, and when the temperature reaches the expected value, the time countdown will be displayed (at the same time, there will be 3 beeps)
cooking function	WHITE RICE		WARM	DELAY
Default time	N/A		00: 00	02: 00
time limit	N/A		12H	1-12H
step	Time cannot be adjusted		Time cannot be adjusted	1H
Remark	work display box  Move clockwise to display a 12-minute countdown while the rice is cooking.		After all cooking functions are completed, it will automatically enter the keep warm function, and the digital tube will display the timing.	Only the "white rice" function can enter the reservation function

② Time Setting:

After selecting the function, press “” key, Enter the cooking time setting of the selected function, the digital tube flashes to display the default time, rotate clockwise or counterclockwise “” The stepless knob can adjust the cooking time of the selected function (see Table 1 for time range and steps);

4、 (Start/Stop) key

- ① After selecting the cooking function, press “” (Start/Stop) key to enter the working state of this function, the “COOKING” indicator light is always on, and the digital tube presses “Table 1” to steadily display the set time or swimming frame.
- ② Enter cooking status, press within 3 minutes “” (Start/Stop) key to cancel the current working state and return to the active state. After 3 minutes or more, if you need to cancel the current working state, you need to press and hold “” (Start/Stop) key for 2 seconds to cancel the current working state and return to the active state.
- ③ The cooking function automatically switches to keep warm after completion.

5、 (Keep warm) button:

- ① While active, press “” (Keep Warm) button to directly enter the heat preservation working state, the “WARM” indicator light becomes long and bright, the digital tube displays “00:00”, and the countdown starts;
- ② The keeping warm time cannot be adjusted. The longest keeping warm time is 12 hours. When the keeping warm is completed, the buzzer will sound 3 times and return to standby mode.

6、 (Reservation) button (the cooking function will start after the reservation time is completed)

- ① Only “WHITE RICE” can be reserved;
- ② First select the “WHITE RICE” function, then press “” (Reservation) button to enter the reservation setting, the “WHITE RICE” and “DELAY” indicators flash, and the digital tube displays the default time “02:00” (2 hours);
- ③ Rotate clockwise or counterclockwise “” Stepless knob, adjustable reservation time, reservation time range: 1~12 hours, 1 hour step;
- ④ After setting the reservation time, press “” (Start/Stop) button to enter the reservation working mode, the “WHITE RICE” and “DELAY” indicators are always on, the digital tube displays the reservation time, and the countdown starts at the same time;
- ⑤ When the countdown is completed, it will automatically enter the cooking state.

7、Power-off memory function

If there is a power outage during work, and the power outage time is within 20 minutes (error ± 10 minutes), it can automatically continue the previous work when it is powered on again. If it is powered on again after more than 30 minutes, it will enter the activated state.

8, Conservation (Conservation Standard Procedure)

When a sensor failure occurs: the computer disconnects the heating, all buttons are inactive, the buzzer beeps for a long time (1.5 seconds), and all LED lights flash;

The digital tube displays the corresponding code:

- ① When the bottom sensor branch is open, the digital tube displays E1 in the center;
- ② When the bottom sensor branch is short-circuited, the digital tube displays E2 in the center;
- ③ Over-temperature protection; when the sensor temperature exceeds 224°C in the "frying" working mode, and when the sensor temperature exceeds 185°C in other working modes, it will enter the over-temperature alarm state (the buzzer will sound for 1 second, stop for 2 seconds and alarm for 10 times), and the digital tube will display E5 in the center. When the temperature is lower than 185°C , it will automatically return to the active state when the power is turned on again.