


Assembly and Playing Instructions


Pitching Machine

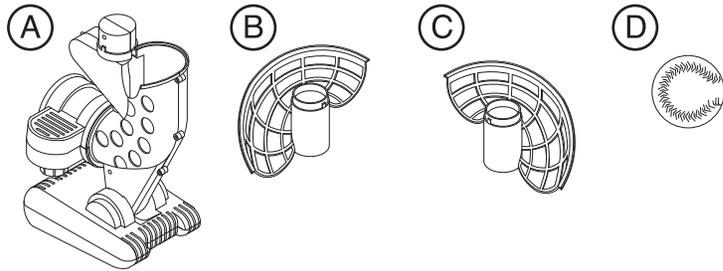

PARTS LIST:

Part #	Description	Quantity
(A)	Base Unit	1
(B) and (C)	Ball Carriages	2
(D)	Plastic Baseballs	6

BATTERY INSTALLATION:

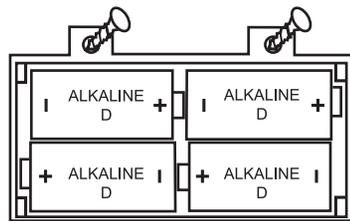

Remove screws and slide door to open

Insert batteries into base unit (A) as shown.

- Requires 4 "D" size batteries (not included)
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

TO ASSEMBLE:

Base Unit

- Assemble the two sections of the ball carriage by inserting one carriage column into the other.
- Interlock tabs at mating corners of the carriage sections.
- Press firmly together.
- Align the base unit with the bottom of the carriage column and press the carriage firmly down onto the base.
- Interlock tabs at mating corners of the carriage assembly and the base.
- Load the balls into the carriage.

