

GETTING STARTED WITH YOUR NEW ALT KEYBOARD

INITIAL START-UP

- Either USB-C port on the ALT can be used to connect your keyboard to your computer.
- The keyboard should work out of the box with macOS, Windows, and Linux operating systems.

USB HUB FUNCTIONALITY

After connecting the ALT keyboard to your computer, the unused USB-C port on the keyboard can be used as an I/O port for your computer. Note: The keyboard dynamically measures and manages power utilization on the USB Vbus. Typical capacity will vary depending upon the host computer but can be expected to range between 2 and 4 watts.

ALT WARRANTY

- In the event that the product purchased experiences defect or failure, please contact Drop Support and provide your transaction ID with a description of the issue. Include photos or videos, if applicable.
- Drop Support might ask for additional information, such as the product's serial number, so be sure to have that information ready.
- Drop will request for the product to be sent back to a specified return address, which will be provided to you via email.
- Upon receipt of the defective product, Drop will make every effort possible to ensure your satisfaction by shipping you a replacement.
- You are responsible for the cost of return shipping if a request is submitted after 2 weeks of receiving the item.
- Drop reserves the right to refund the purchase price as its exclusive warranty remedy if a replacement cannot be sourced.

DEFAULT HOT KEYS

Hold Fn + listed keys to activate

LED KEYS

A	LED Pattern Select Previous
D	LED Pattern Select Next
W	LED Brightness Increase
S	LED Brightness Decrease
Q	LED Scrolling Pattern Speed Decrease
E	LED Scrolling Pattern Speed Increase
Tab	LED Toggle Breathe Effect
Capslock	LED Toggle Scrolling Pattern Direction
X	LED Toggle On/Off
Z	LED Toggle Mode (Keys+Edge, Keys Only, Edge Only)

MEDIA KEYS

Page Up	Volume Up
Page Down	Volume Down
Delete	Mute

FUNCTION ROW

1	F1
2	F2
3	F3
4	F4
5	F5
6	F6
7	F7
8	F8
9	F9
0	F10
-	F11
=	F12

OTHER KEYS

P	Print Screen
[Scroll Lock
]	Pause
Left Arrow	Home
Right Arrow	End
Up Arrow	Page Up
Down Arrow	Page Down
Escape	Backtick / Tilde (` / ~)

KEYBOARD OPTION KEYS

N	Toggle keyboard 6KRO/NKRO (Default state is 6KRO)
---	---

CUSTOMIZABLE FIRMWARE

To build new keymaps and hotkeys, please visit the the keyboard configurator (dro.ps/alt-setup-guide).