



# NACON WIRED COMPACT CONTROLLER FOR PS4™

*User guide*

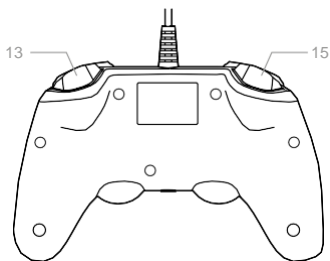

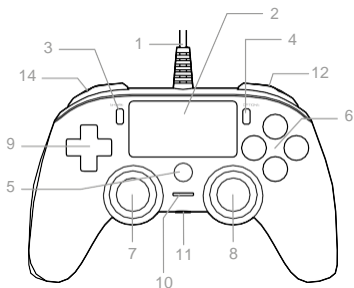

## EN

- 1 - USB cable
- 2 - Touch pad
- 3 - "SHARE" button
- 4 - "OPTIONS" button
- 5 - "PS" button
- 6 - Action buttons
- 7 - Left stick with L3 button
- 8 - Right stick with R3 button
- 9 - Directional pad
- 10 - LED player status indicator
- 11 - Headset connector (3.5mm jack)
- 12 - R1 Shoulder button
- 13 - R2 Analogue trigger
- 14 - L1 Shoulder button
- 15 - L2 Analogue trigger

Thank you for purchasing the NACON WIRED COMPACT CONTROLLER for PS4™. This product has been designed to enhance your gaming experience. Please keep this instruction manual for future reference. If you require any assistance or help please contact Technical support.

## **WARRANTY**

This product bearing the NACON trademark, is guaranteed by the manufacturer for a period of 2 years from the date of purchase, and will, during this period be replaced with the same or a similar model, at our option, free of charge, if there is a defect due to faulty material or workmanship. This guarantee does not cover defects arising from accidental damage, misuse or wear and tear, and is available only to the original purchaser of the product. This does not affect your statutory rights.

## **SET-UP**

Connect the USB plug of your WIRED COMPACT CONTROLLER to one of the free USB ports on your PlayStation®4 system, then power on your system.

*Notice: Please note that this controller does not support the following functions of the DUALSHOCK®4 wireless controller: built-in speaker, light bar and SIXAXIS™ motion sensor.*

To improve the usability of this product firmware updates might be published on our website

## **PRECAUTIONS**

01. This unit is for indoor use only.
02. Do not expose to dust, direct sunlight, wet weather conditions, high humidity, high temperatures or mechanical shock.
03. Do not expose the unit, to splashing, dripping rain or moisture. Do not immerse in liquid.
04. Do not disassemble; there are no serviceable parts inside.
05. Do not use if the equipment is damaged.

## **IMPORTANT SAFETY NOTICE**

01. If at any time whilst using this product you feel pain, weakness, numbness or tingling in your hands, wrists, elbows or shoulders we recommend that you cease using it until these symptoms subside.
02. We recommend that you take frequent breaks of fifteen minutes every hour and hold the controller with a light grip while playing a game.

## **ATTENTION**

This device is not designed to be used by anyone (including children) with impaired physical, sensory or mental capacity, or by anyone without appropriate experience or knowledge unless they have received prior guidance or instructions related to the use of this device from someone who is responsible for their safety. Children should be supervised while playing.

All trademarks are the property of their respective owners - Keep this information for future reference  
- Help us to protect the environment! Do not dispose of electronic items in household rubbish.



#### **DISPOSAL OF OLD ELECTRICAL & ELECTRONIC EQUIPMENT**

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment.

By ensuring that this equipment is disposed of correctly you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources.

For more information please contact your local council or waste disposal service.