



Assembly Instructions for Model Numbers B24, B30, B36, B42, B48, B24DD, B30DD, B36DD, B42DD, B48DD

IMPORTANT INFORMATION

Remove collar, tags, and leads from pet before placing it in the home to prevent possible entanglement.

Unwrap and remove all parts from the box. Keep the box and packing material until the product is assembled. In case of return or exchange, failure to return product in similar condition as received could result in limited reimbursement. Please save sales receipt as proof of purchase.

ASSEMBLY INSTRUCTIONS

1. Remove the folded crate from the carton so that the plastic pan is on the bottom.
2. Grab any wire on the top panel and turn it like the page of a book.
3. Grab the top panel of the crate and pull upwards. This will form the top and the sides.
4. Make sure the bottoms of the two side panels rest inside the bottom panel and that one edge of the top panel is "inside" one side panel and "outside" the other side panel (as illustrated).
5. Reach in the home and pull the door panel that is resting on top toward you until it fits into the clips on the ends of the side panels.
6. To secure the door panel to the top panel, gently pull outward on the end panel while pushing down on the top panel. Then fit the hooks over the end wire on the top. On the 36", 42" and 48" crate, be sure the "u wire" stop on the end of the top panel rests over the top wire of the door panel.
7. Repeat Steps 5 and 6 with the end panel.
8. To remove the plastic pan, unhook the pan stop and slide the plastic pan out of the crate through the space in the bottom of the crate.
9. To disassemble, reverse this process.

